



# DZ-FD-22改-QU

## 854\*396\*2035H

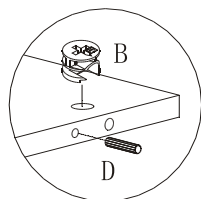

Do not put the Dowels in the Cam Screw holes!

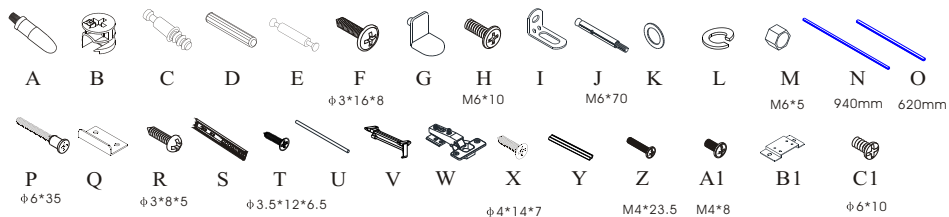