


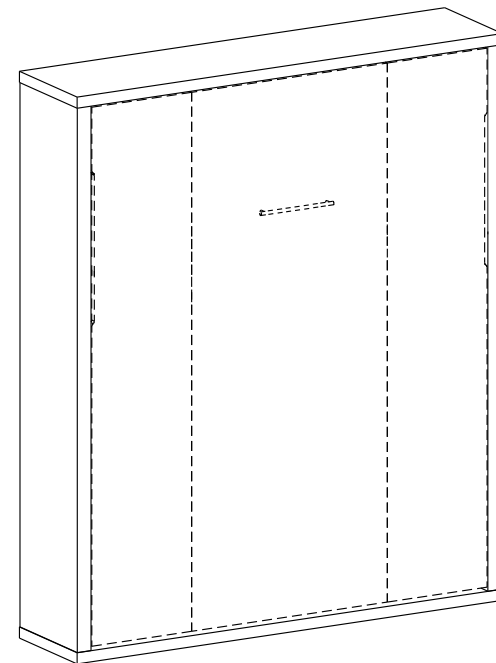


Assembly Manual

FJ-103 Vertical Tilting Bed




Hardware List

Exterior Standing Frame Fitting

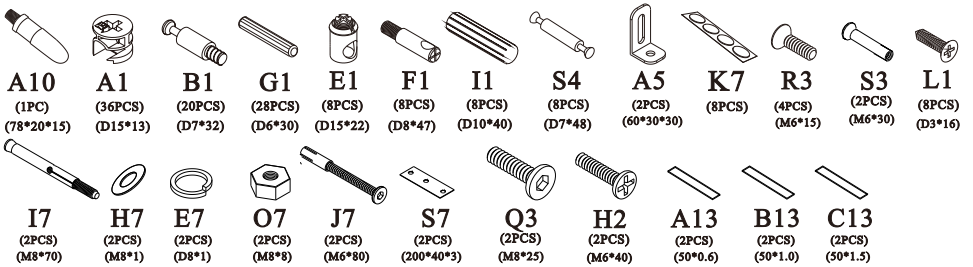


Bedframe Fitting

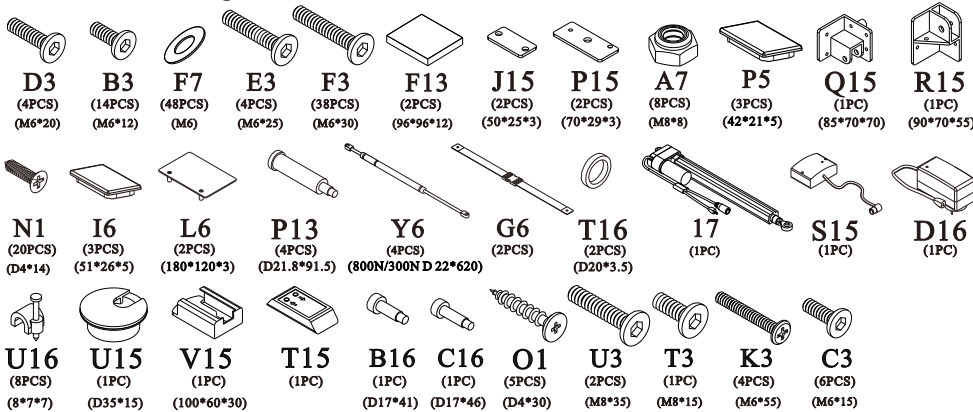


Pre-assembled Fitting


There hardware have been assembled into the unit,so you don't need to look for them into the bags

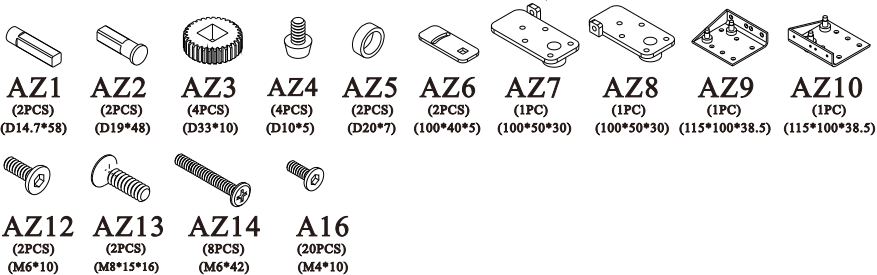

Door Fitting

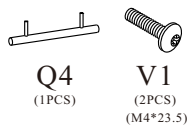


Panels and Bedframe:

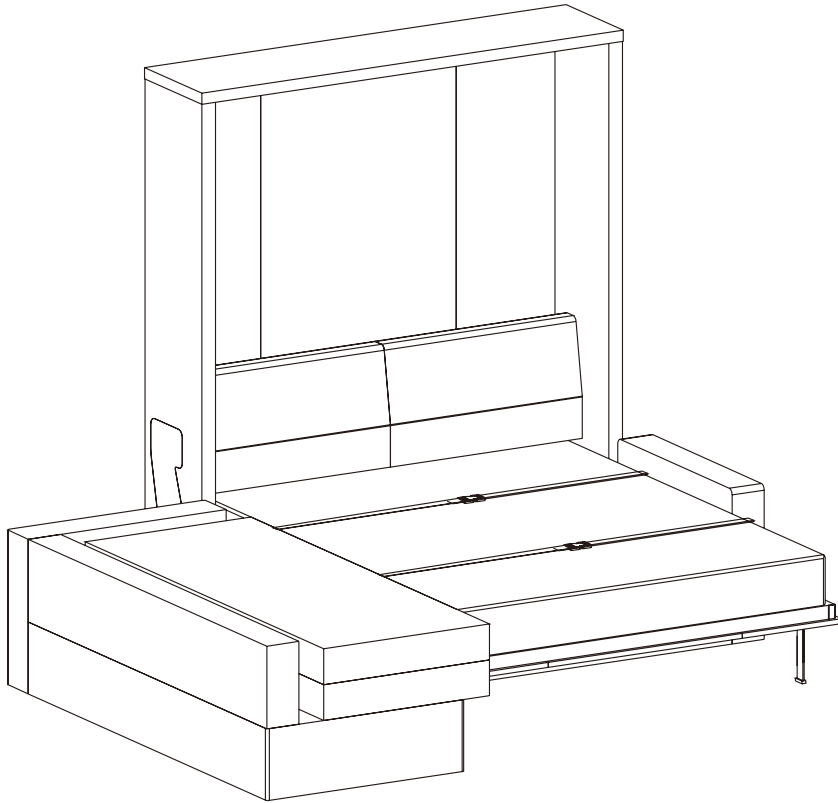


NOTE:

A. CHILDREN (BELOW 18 YEARS OLD) ARE FORBIDDEN USING THIS FURNITURE.




B. WHEN FOLDING DOWN THE BED, STAY AWAY FROM THE BENEATH OF THE BED. WHEN FOLDING UP THE BED, STAY AWAY FROM THE MATTRESS. MIND THE GAP AND THE BOOK SHELF HOLDERS DURING THE MOTION OF THE BED.

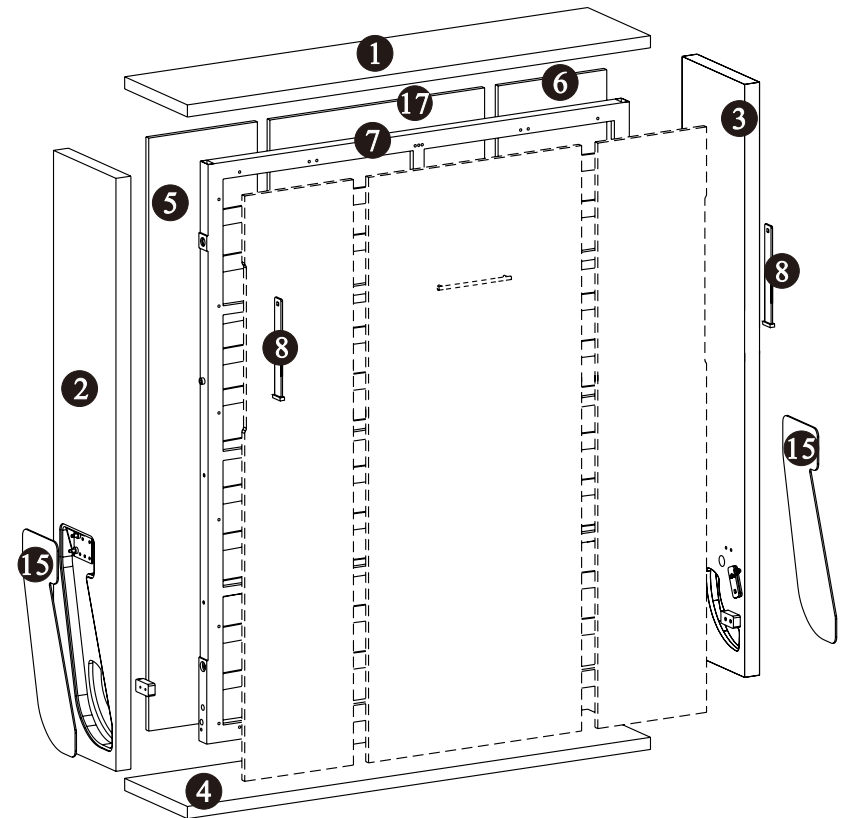

Exterior Standing Frame Fitting


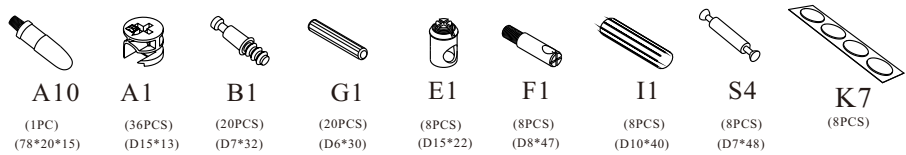


Pre-assembled Fitting

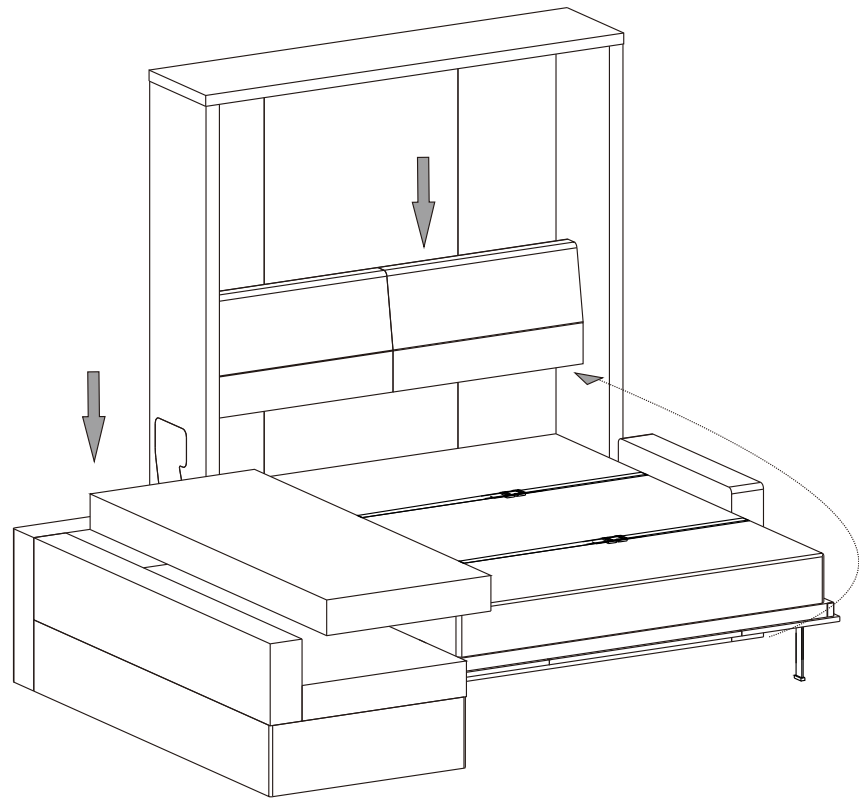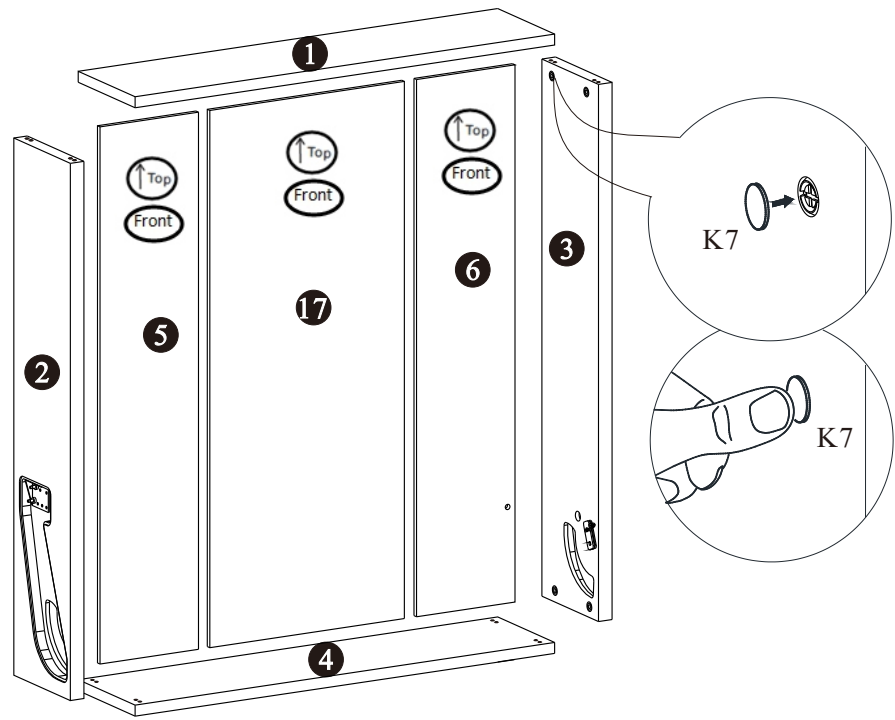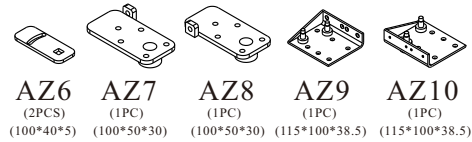

Step 1

			
A10	B1	G1	S4
(1PC) (78*20*15)	(8PCS) (D7*32)	(28PCS) (D6*30)	(8PCS) (D7*48)

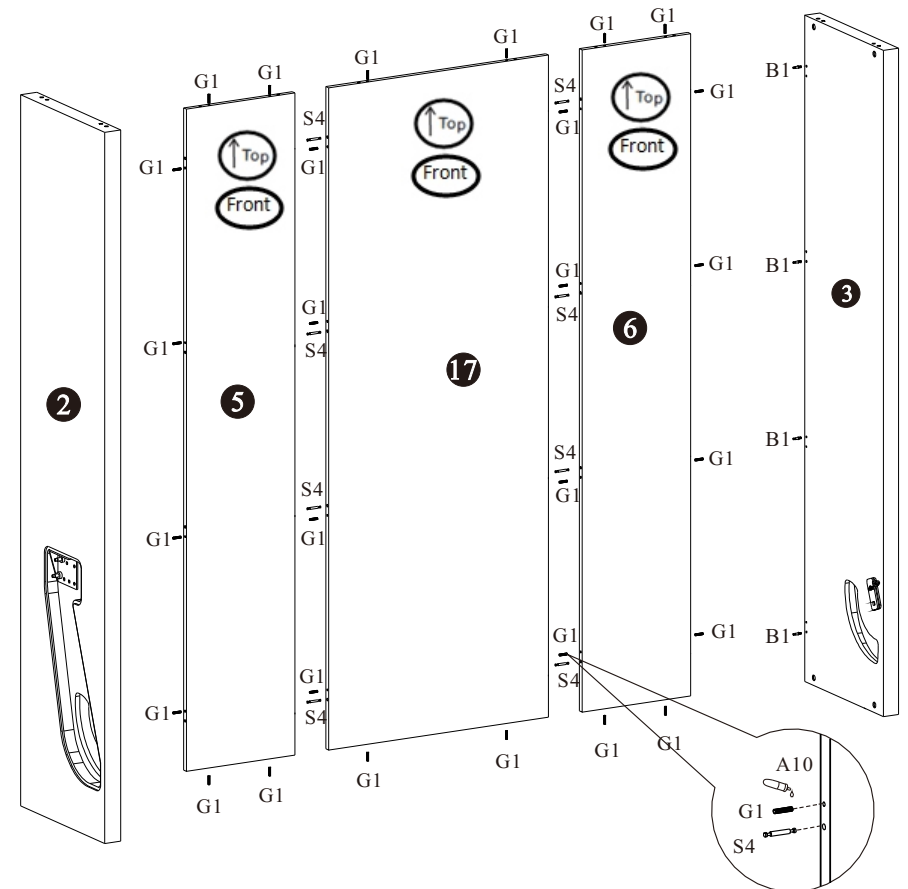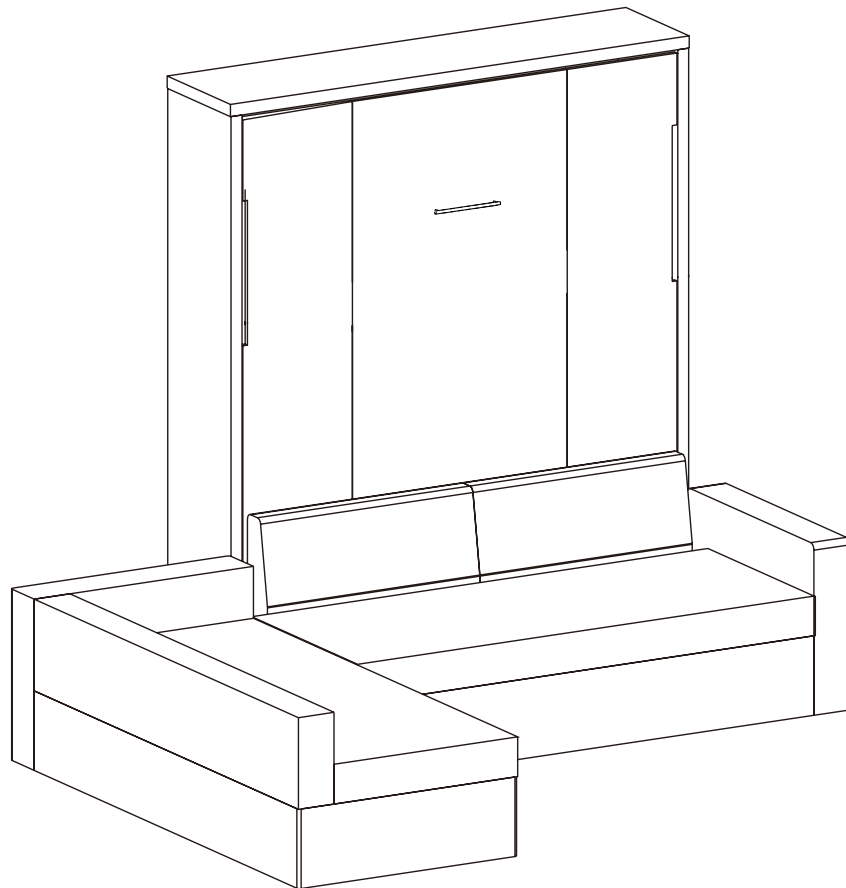

Step 2

- 



A10
(1PC)
(78*20*15)
- 


B1
(12PCS)
(D7*32)
- 

E1
(8PCS)
(D15*22)
- 

F1
(8PCS)
(D8*47)
- 

I1
(8PCS)
(D10*40)

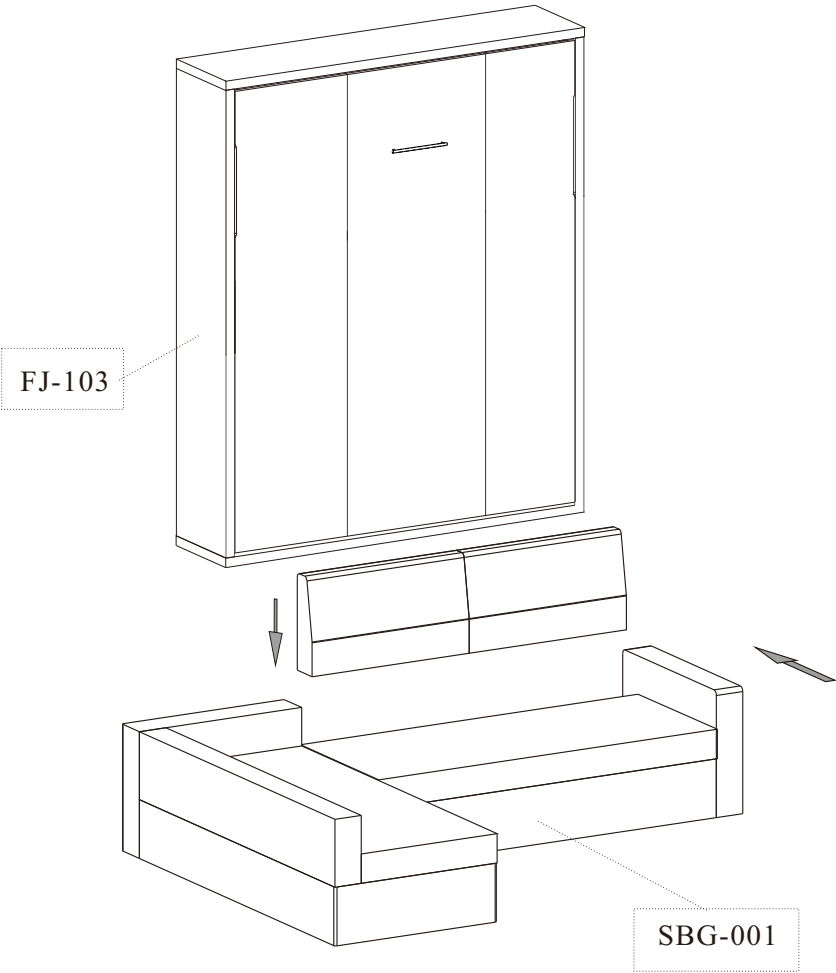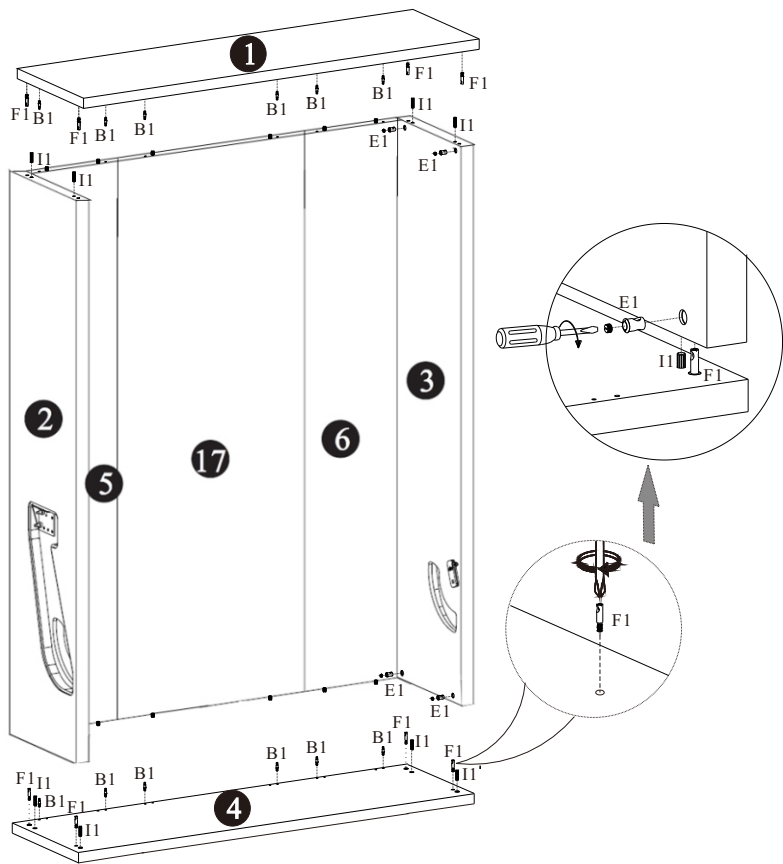


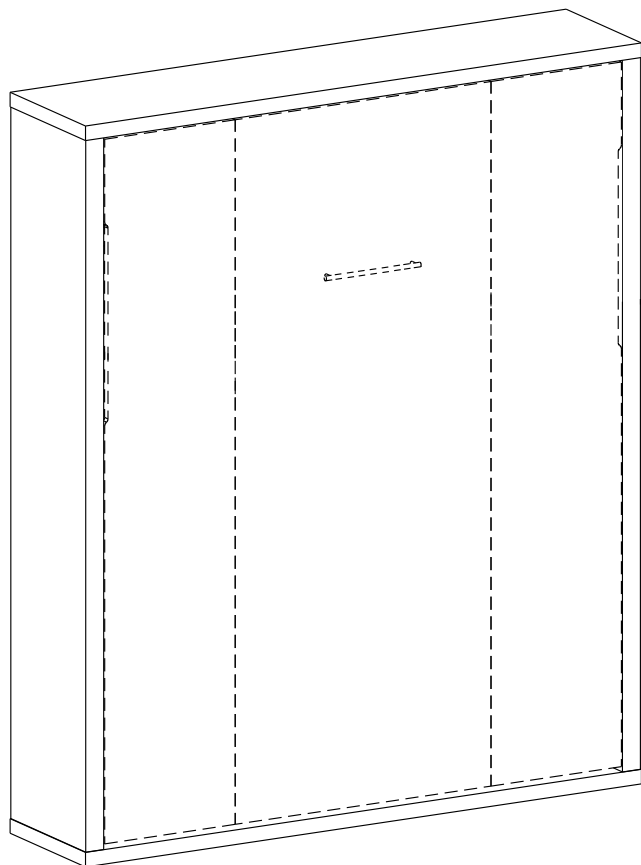

Step 3



A1
(36PCS)
(D15*13)

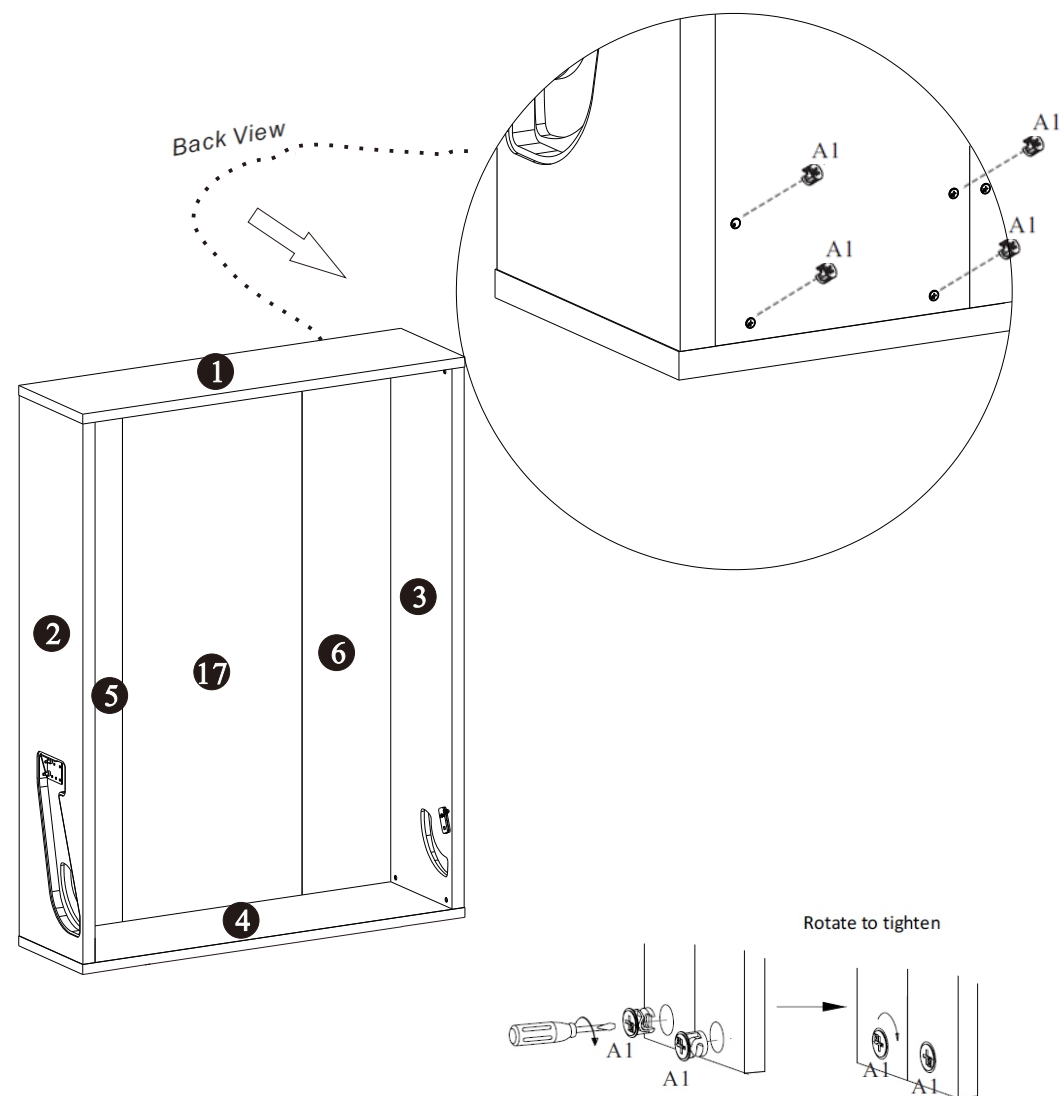


Step 4

- 

A13
(2PCS)
(50*0.6)
- 

B13
(2PCS)
(50*1.0)
- 


C13
(2PCS)
(50*1.5)

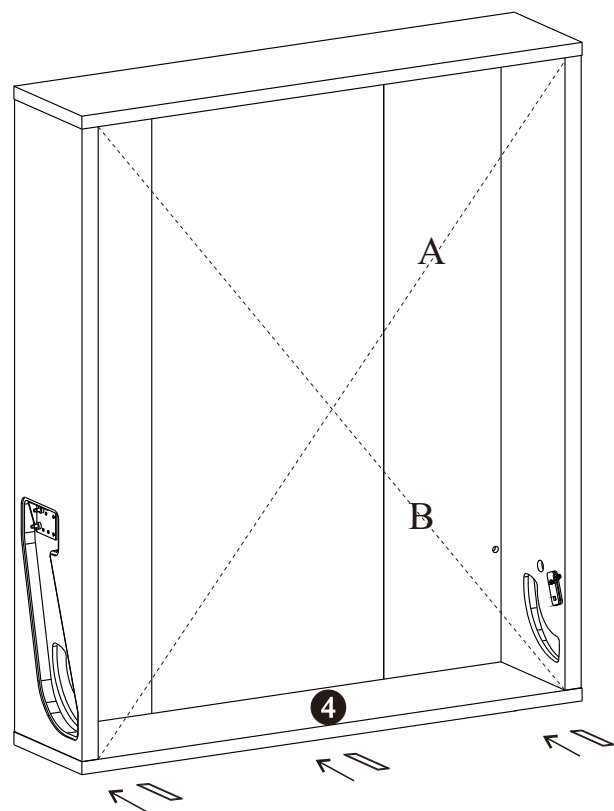

A = B ✓
A ≠ B ✕

Step 21


- 

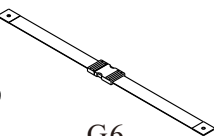B3
(4PCS)
(M6*12)
- 

G6
(2PCS)
- 

V15
(1PC)
(100*60*30)
- 


N1
(2PCS)
(D4*14)

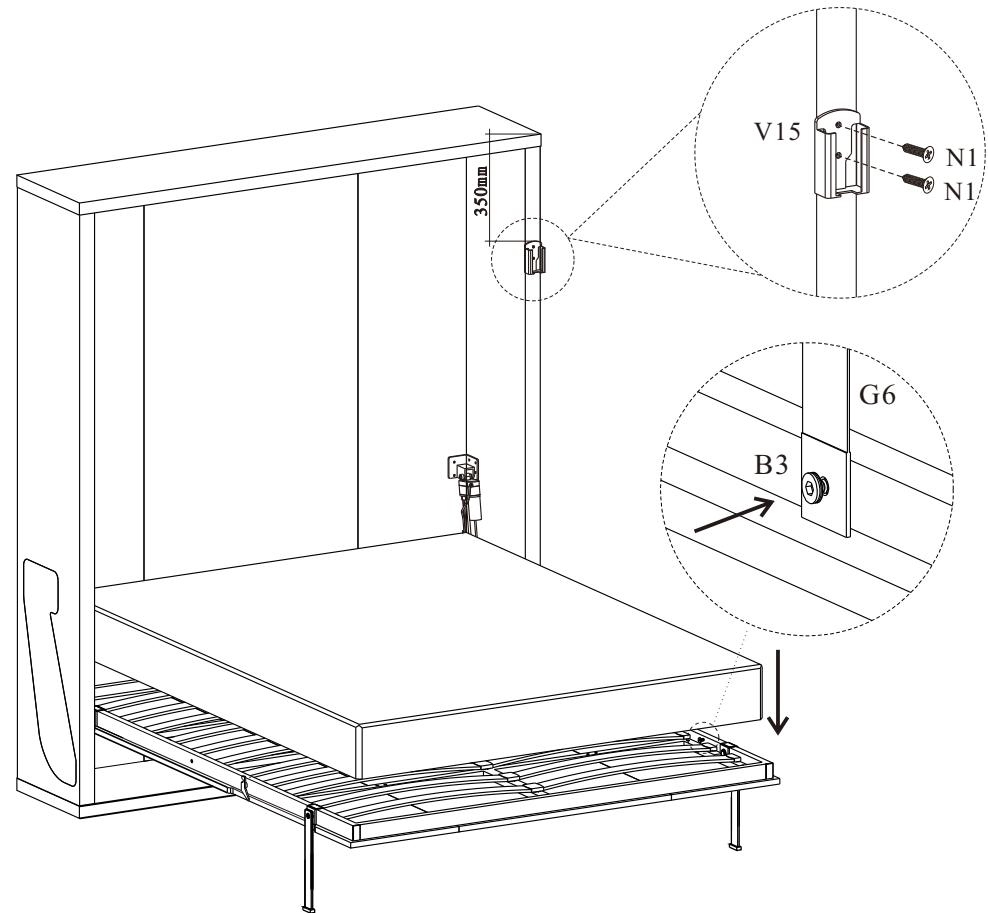

Step 20




L1
(8PCS)
(D3*16)


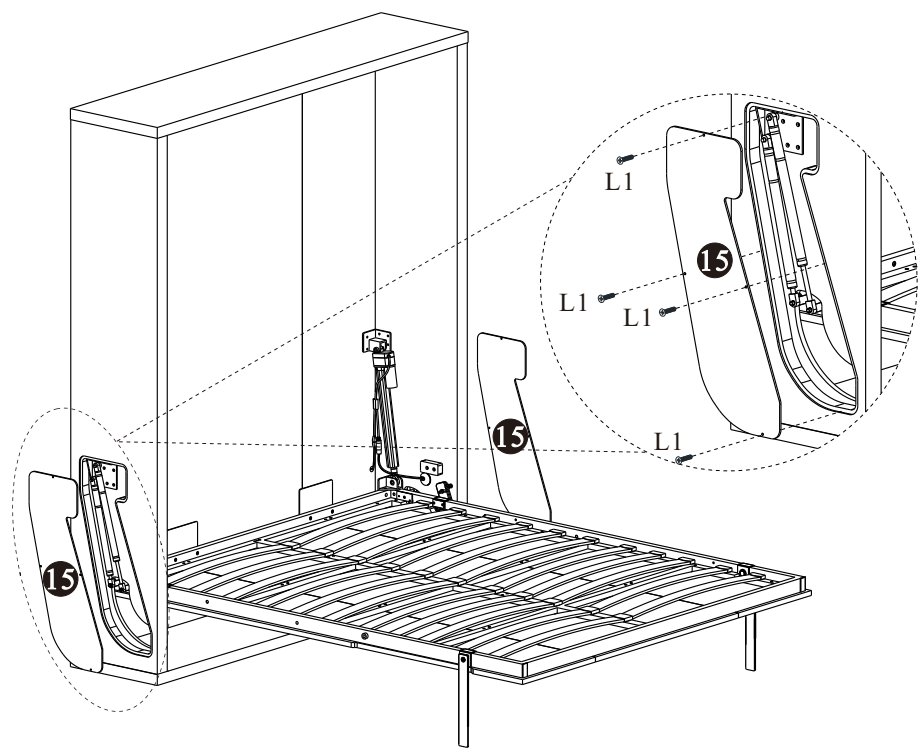


Step 5



- | | | | | | | | | | | | |
|------------|---------|--------|--------|--------|---------|------------|---------|---------|---------|---------|------------|
| | | | | | | | | | | | |
| A5 | I7 | H7 | E7 | O7 | J7 | S7 | Q3 | S3 | H2 | R3 | F13 |
| (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (2PCS) | (4PCS) | (2PCS) |
| (60*30*30) | (M8*70) | (M8*1) | (D8*1) | (M8*8) | (M6*80) | (200*40*3) | (M8*25) | (M6*30) | (M6*40) | (M6*15) | (96*96*12) |

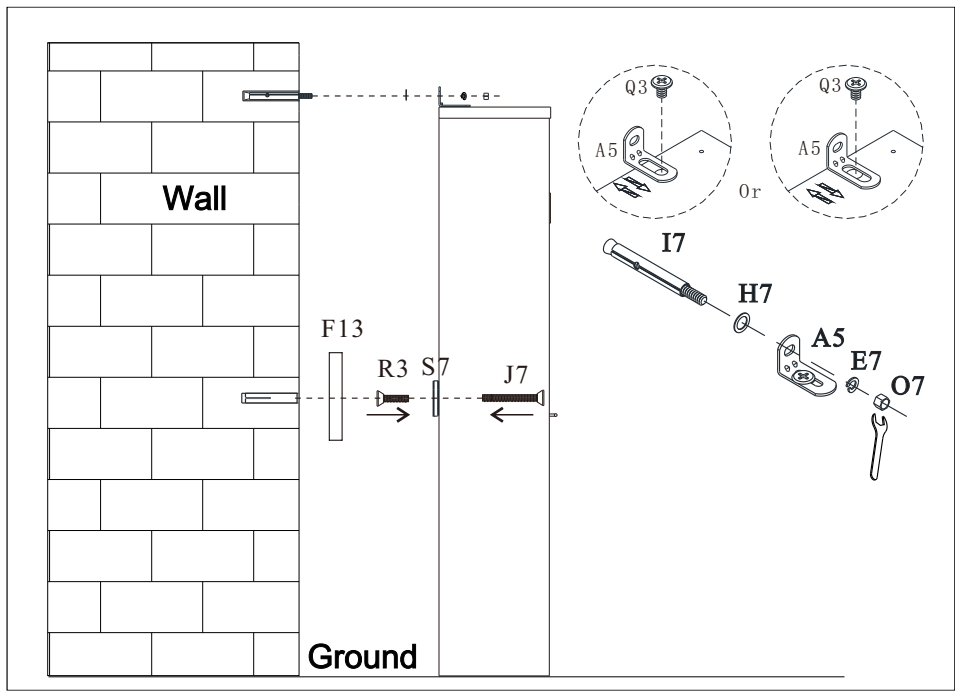



Step 6

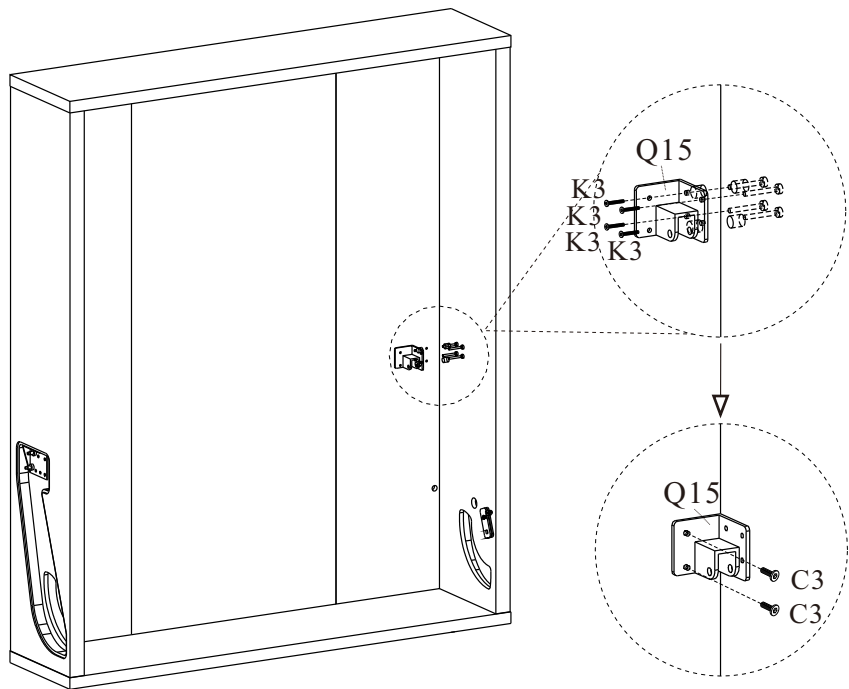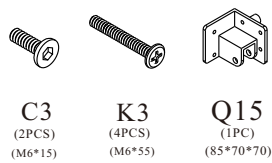



Step 19

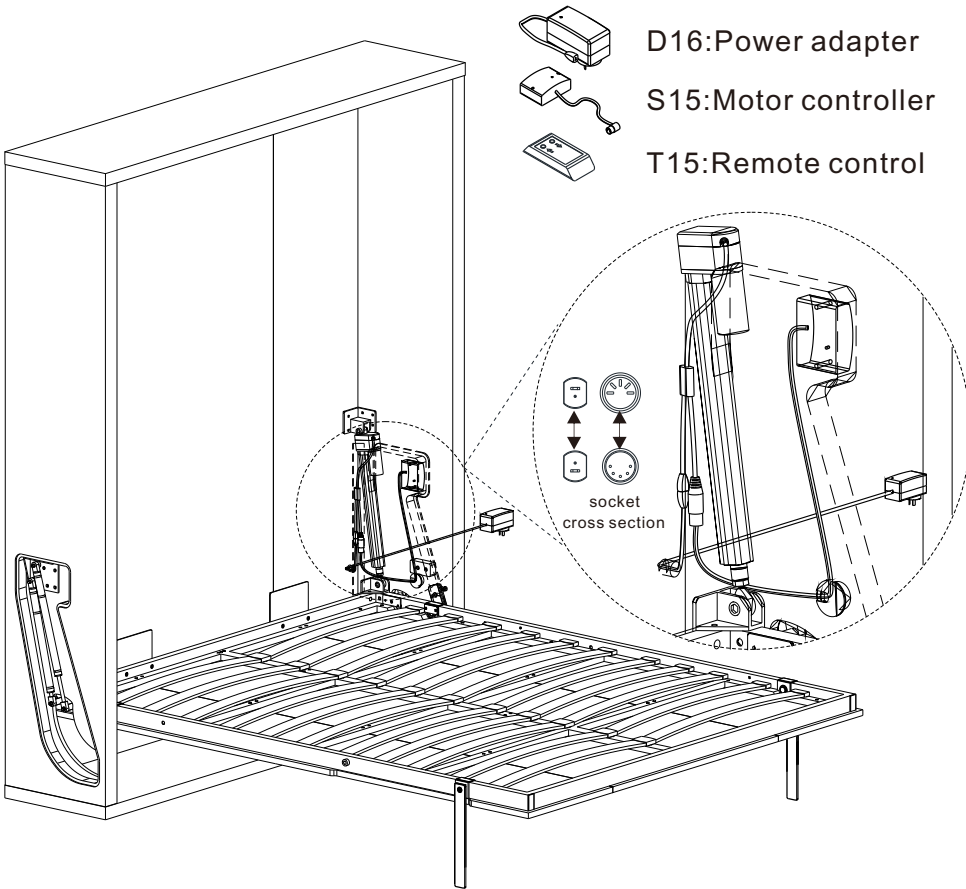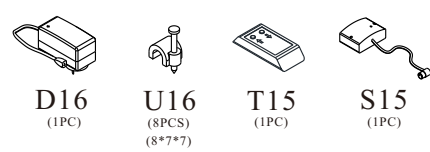

Step 18

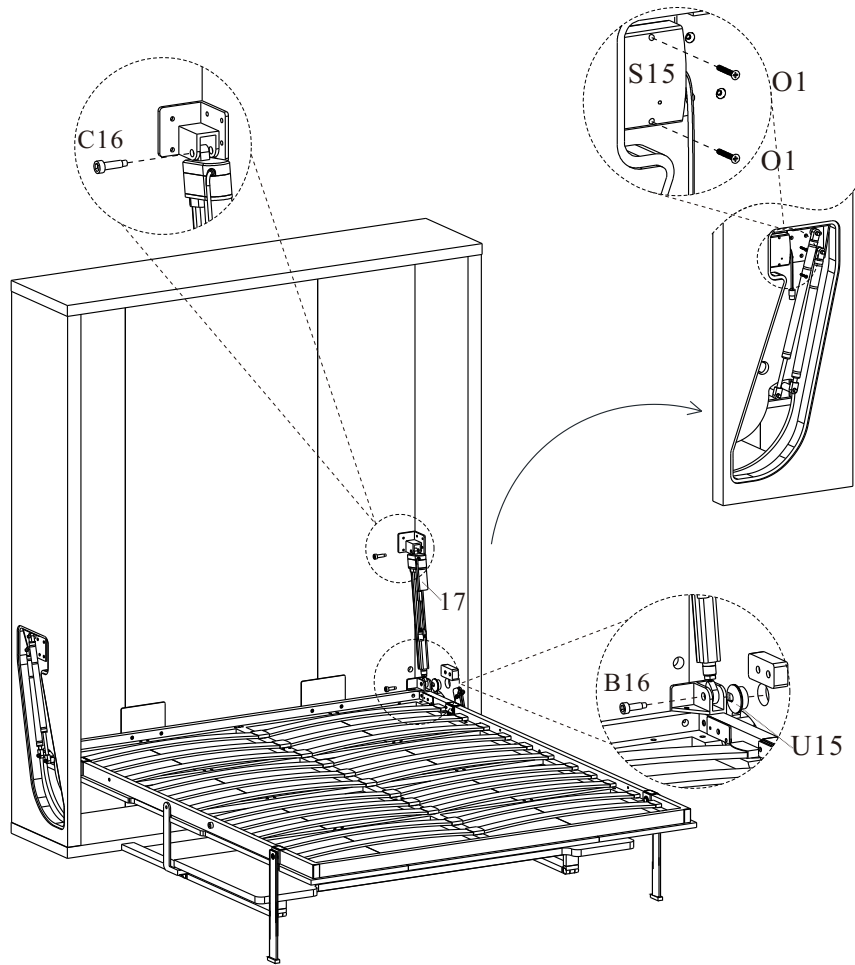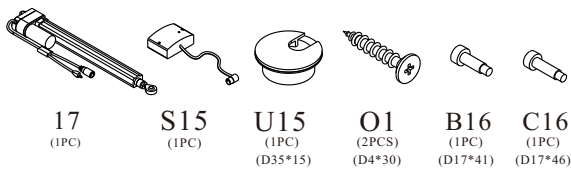

Step 7

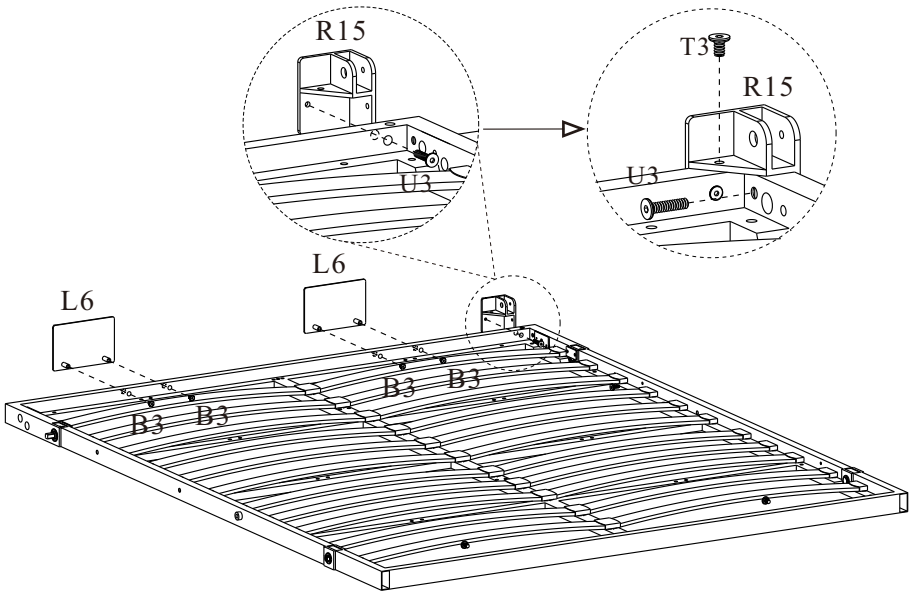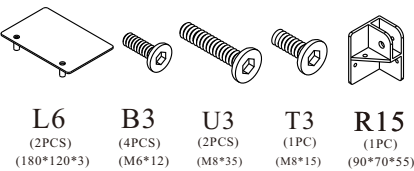

Step 8 Bedframe Fitting

- 

F3
(2PCS)
(M6*30)
- Pre-assembled Fitting



AZ1
(2PCS)
(D14.7*58)



AZ2
(2PCS)
(D19*48)



AZ3
(4PCS)
(D33*10)




AZ5
(2PCS)
(D20*7)



Az15
(2PCS)
(M6)


White Line

Find out the white line marked on the gear rack, and then put the gear right on the white line, with the white line on gear AZ3 in the same direction as the gear rack.

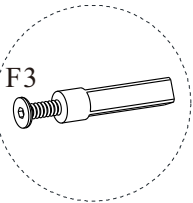


Square Hole



Find out the white line marked on the gear rack, and then put the gear right on the white line, with the square hole of the gear AZ3 horizontal

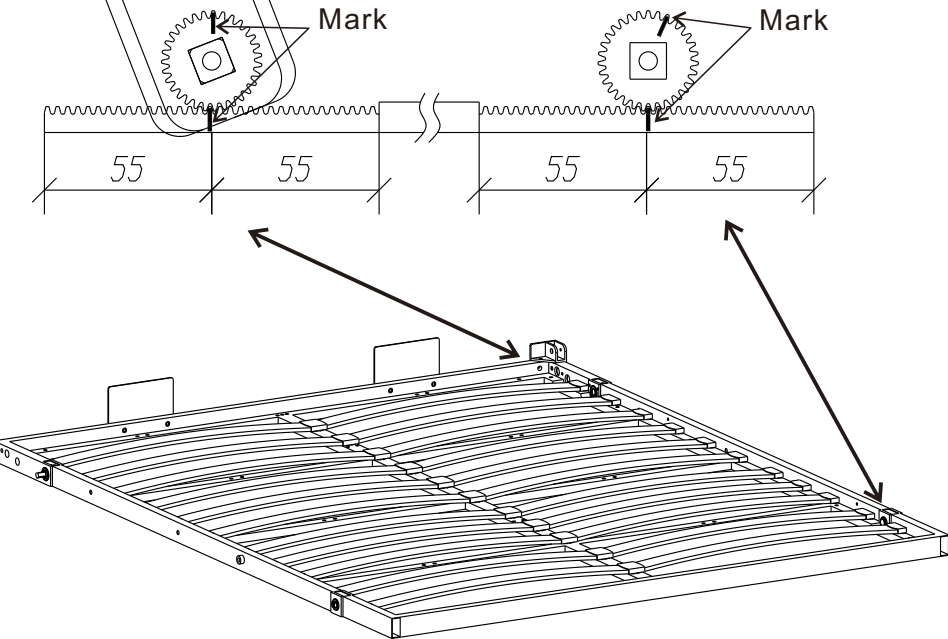


Step 17

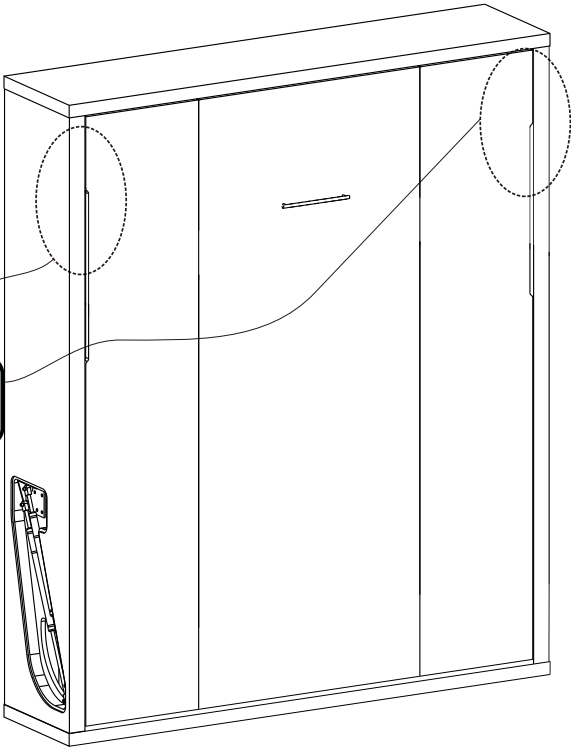



Step 16

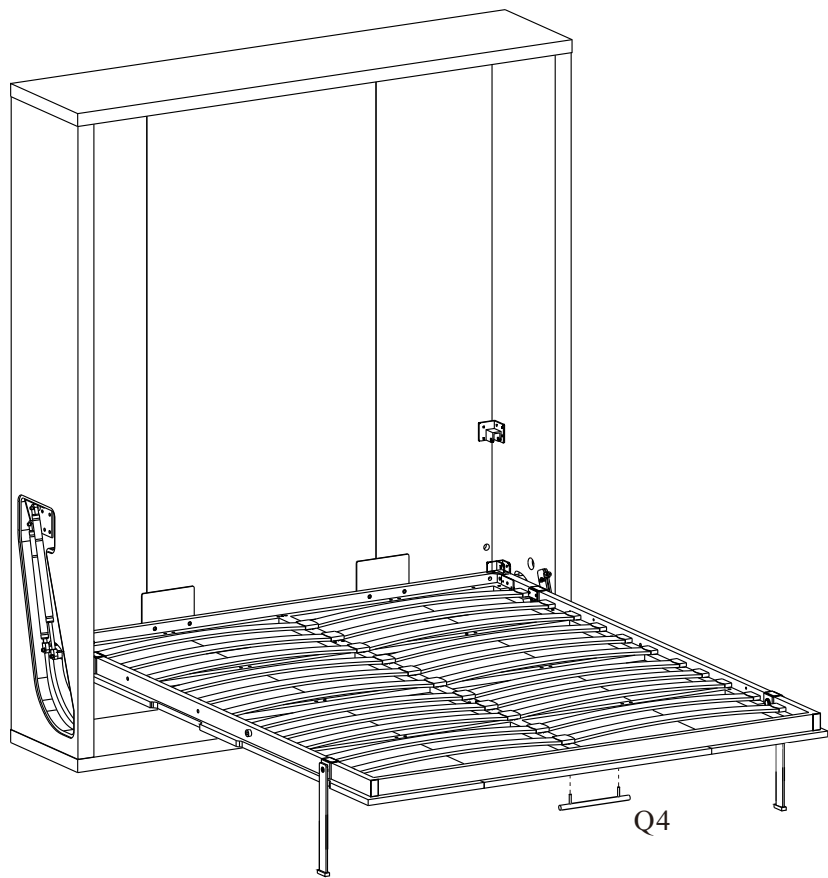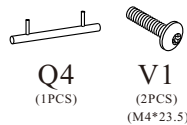

Step 9
Bedframe Fitting

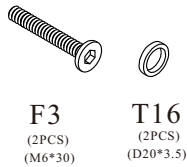

Pre-assembled Fitting

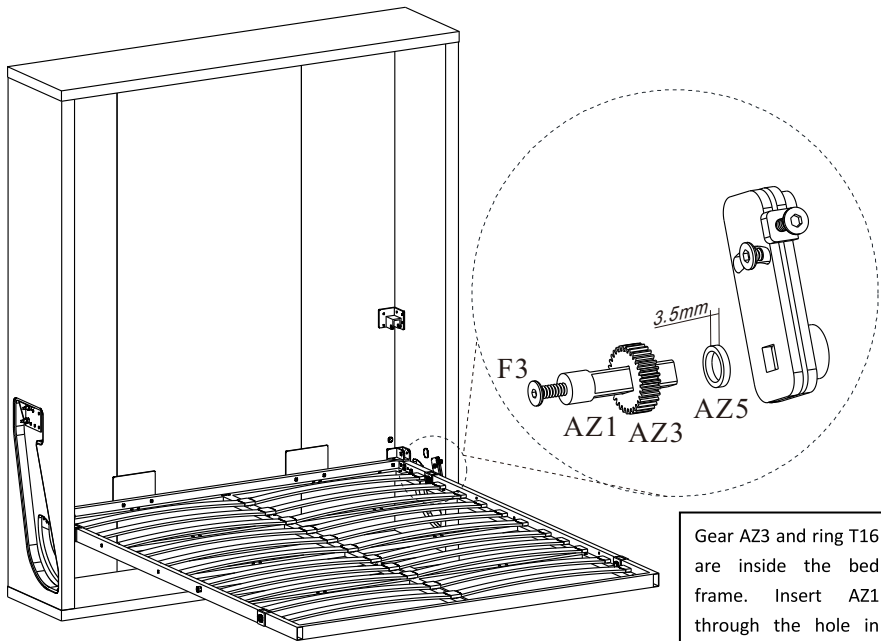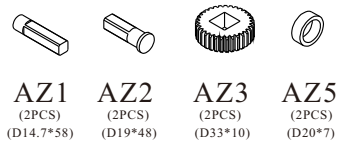

Gear AZ3 and ring T16 are inside the bed frame. Insert AZ1 through the hole in the bed frame and then into AZ3 and T16, and then let come out on the other side.

Step 10


- 

AZ2
(2PCS)
(D19*48)
- 

AZ3
(2PCS)
(D33*10)
- 

AZ13
(2PCS)
(M8*15)
- 

AZ5
(2PCS)
(D20*7)

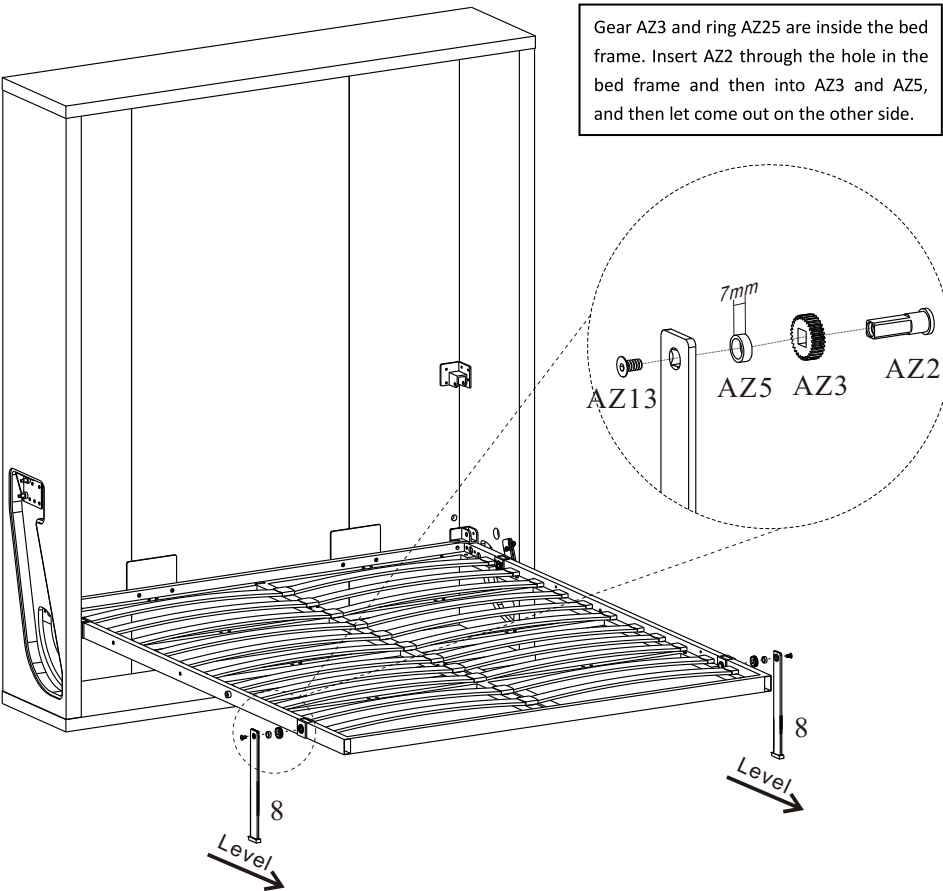


Step 15

- 

F7
(38PCS)
(M6)
- 


F3
(38PCS)
(M6*30)

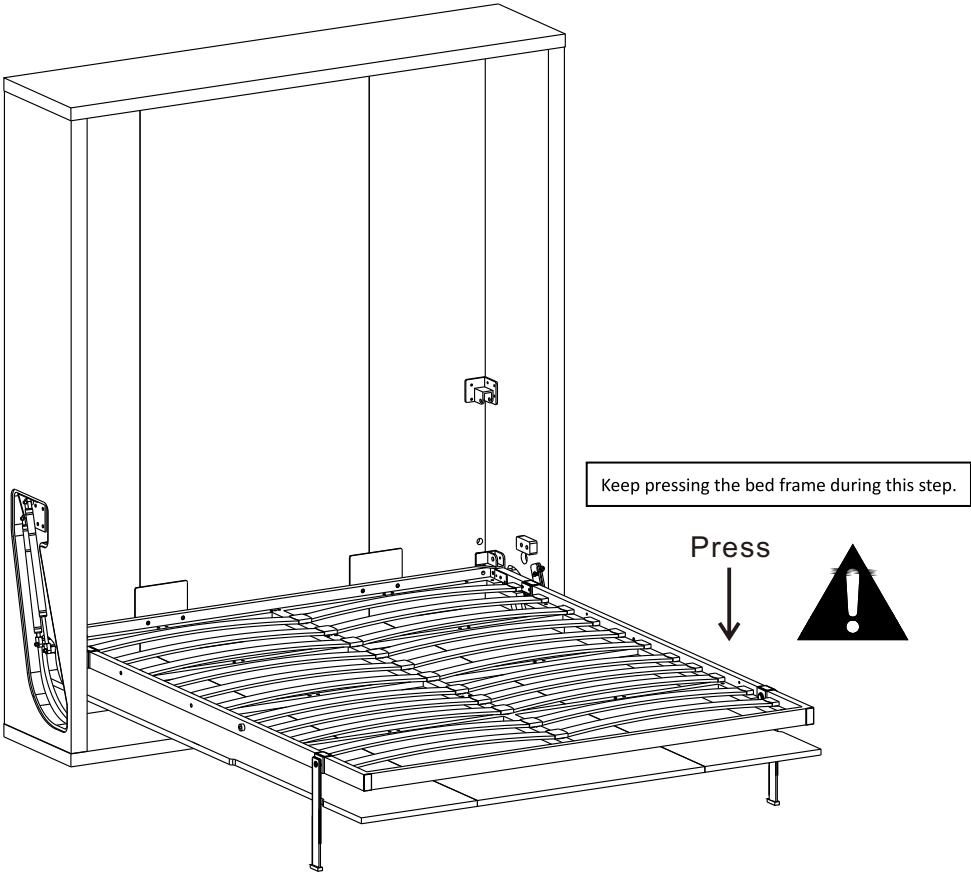



Fold down bed frame. Maintain in prone position by means of some weights. Fasten face fronts using screws (F3) and washers (F7).

Step 14



Bedframe Fitting

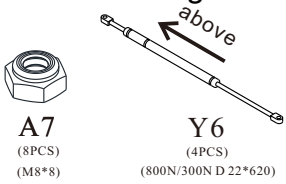



Pre-assembled Fitting

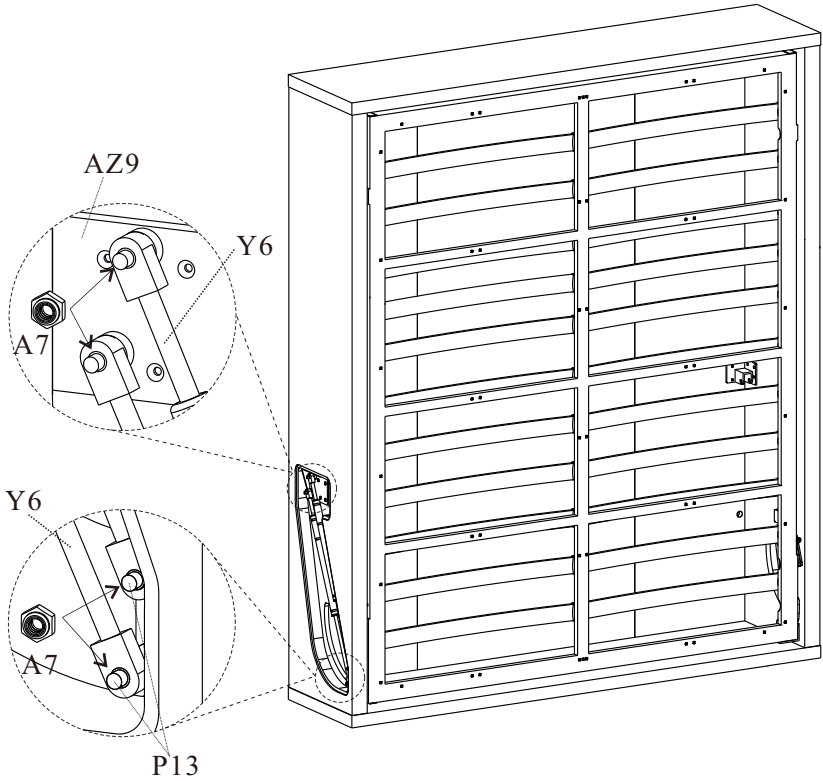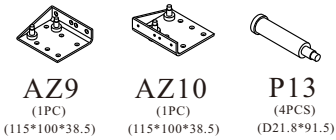

Step 11

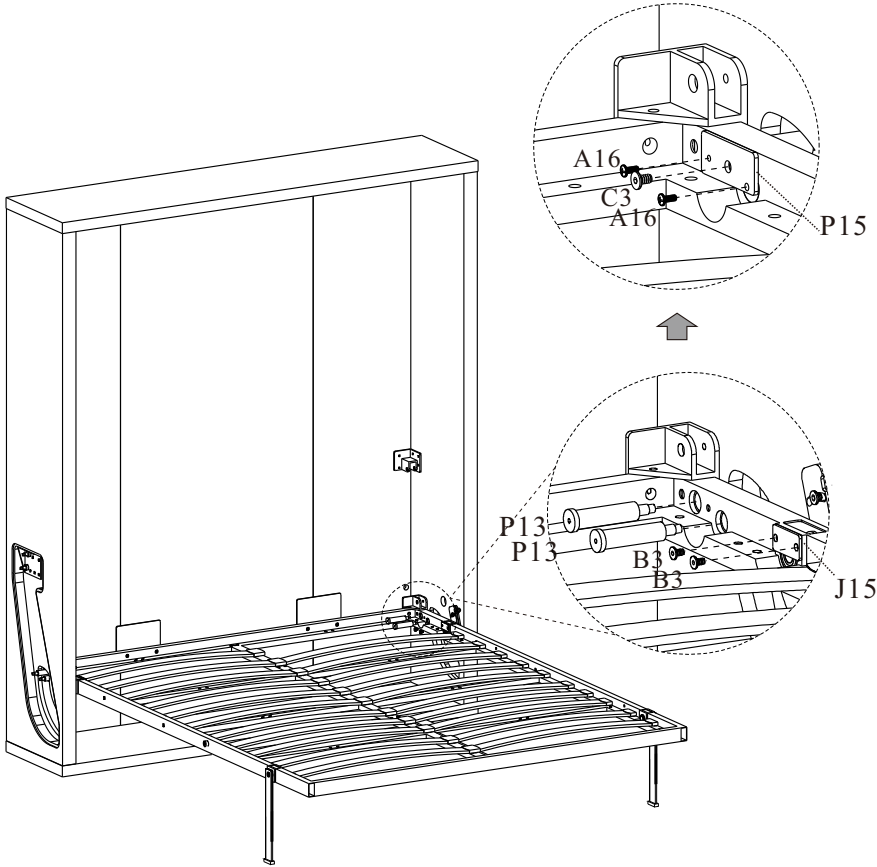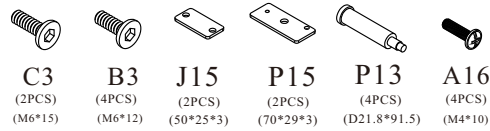

Step 12

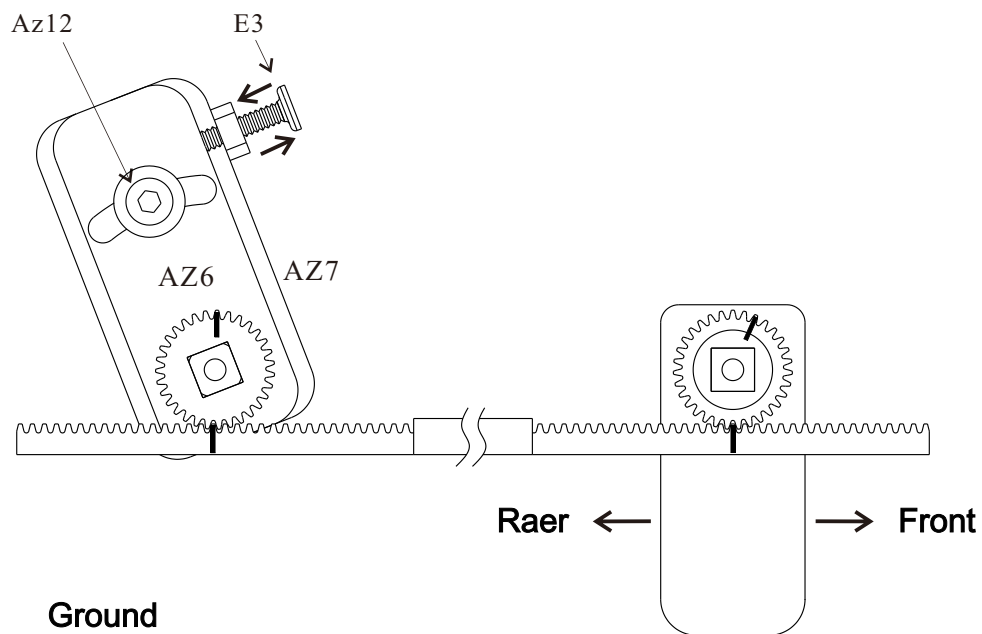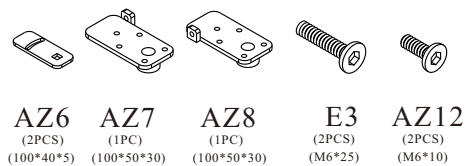

1. If shelf holders lean backward, loosen hex cap screw (AZ12) by using Allen Key, then drive hex socket head cap screw (AZ11) with Allen Key to press adjustment disc (AZ6) till holders become horizontal. Fasten (AZ12) using Allen Key.
2. If shelf holders lean forward, loosen hex cap screw (AZ12) using Allen Key then extract (AZ11) slightly. Adjust holder till they become horizontal. Fasten (AZ12) then drive (AZ11).

Step 13

