





Assembly Manual

FJ-34 Rotary feature bed

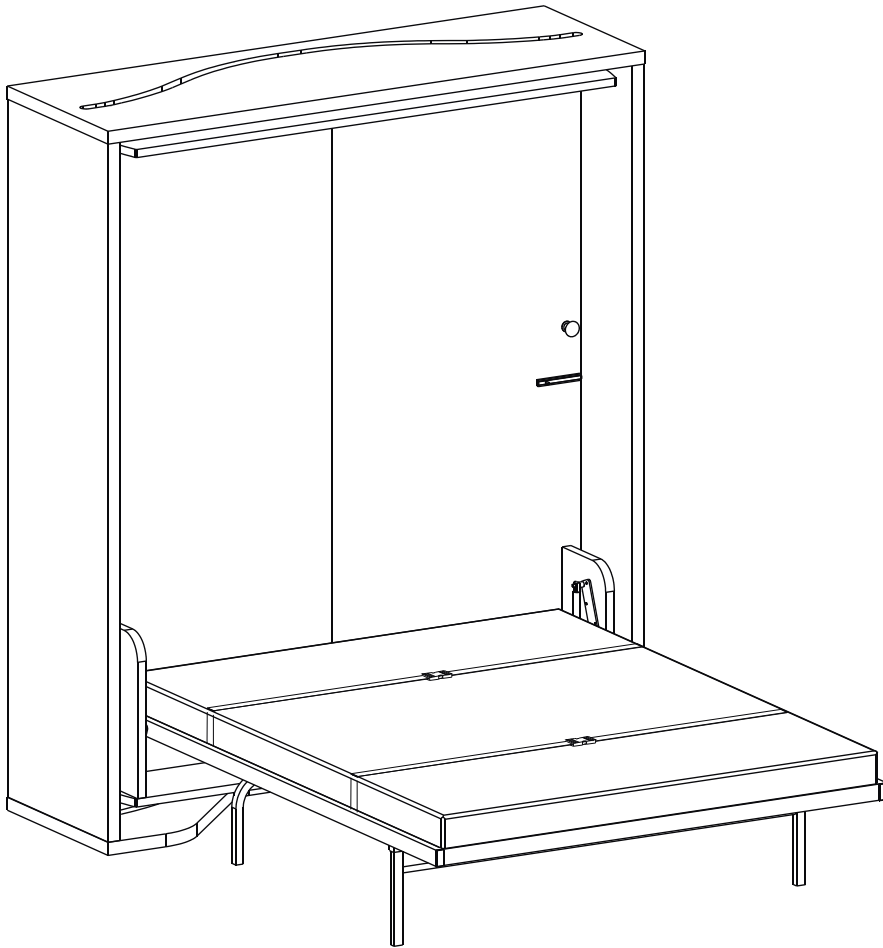


NOTE:

- A. CHILDREN (BELOW 18 YEARS OLD) ARE FORBIDDEN USING THIS FURNITURE.
- B. WHEN FOLDING DOWN THE BED, STAY AWAY FROM THE BENEATH OF THE BED. WHEN FOLDING UP THE BED, STAY AWAY FROM THE MATTRESS. MIND THE GAP AND THE BOOK SHELF HOLDERS DURING THE MOTION OF THE BED.

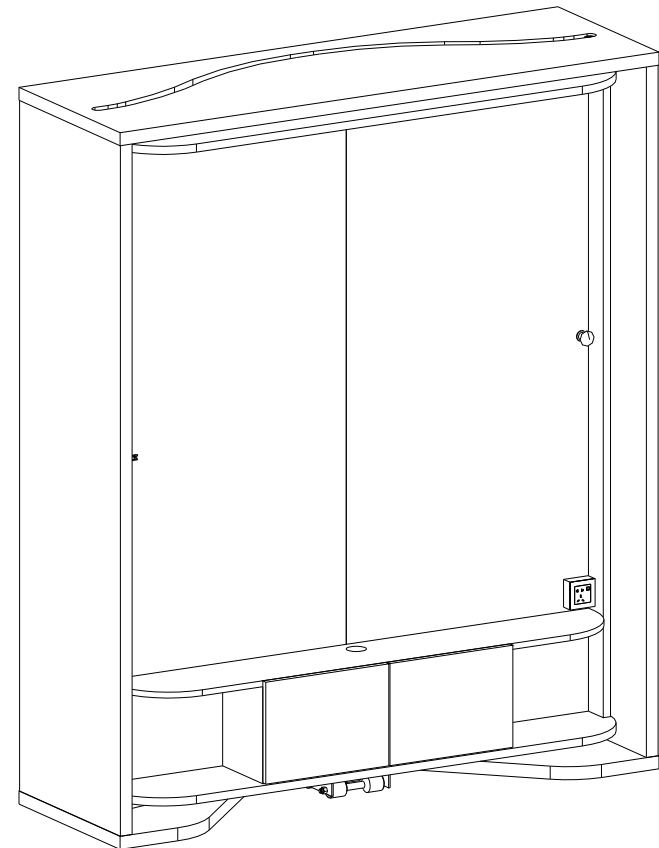


Hardware List

Exterior Standing Frame Fitting

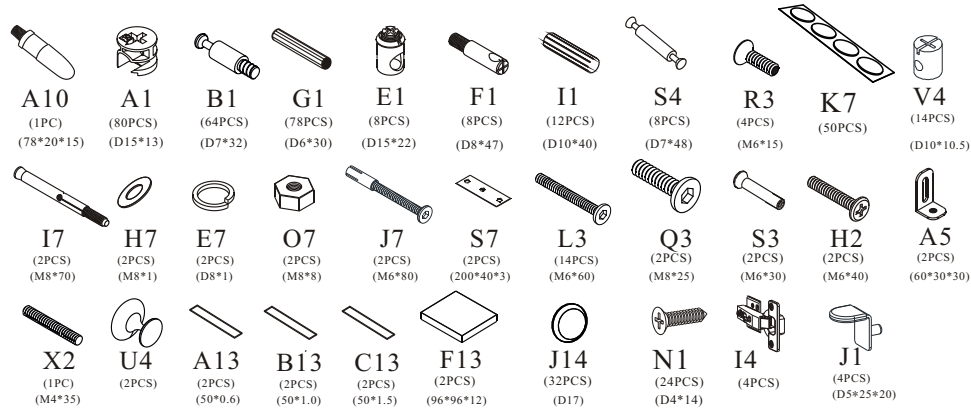


Bedframe Fitting



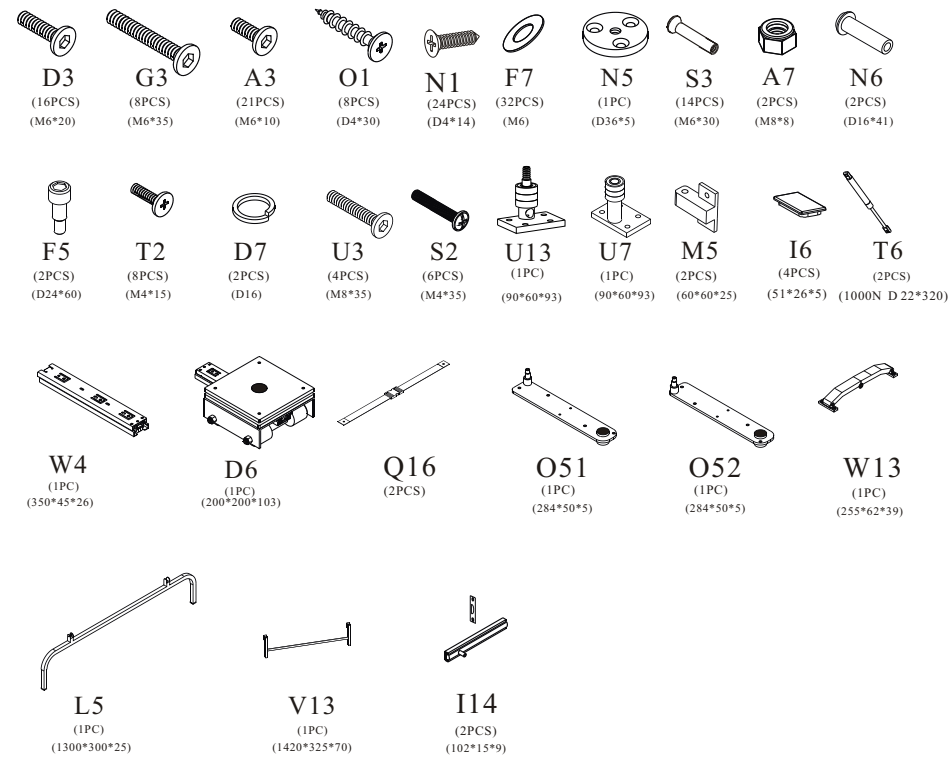


Step 24


Bedframe Fitting

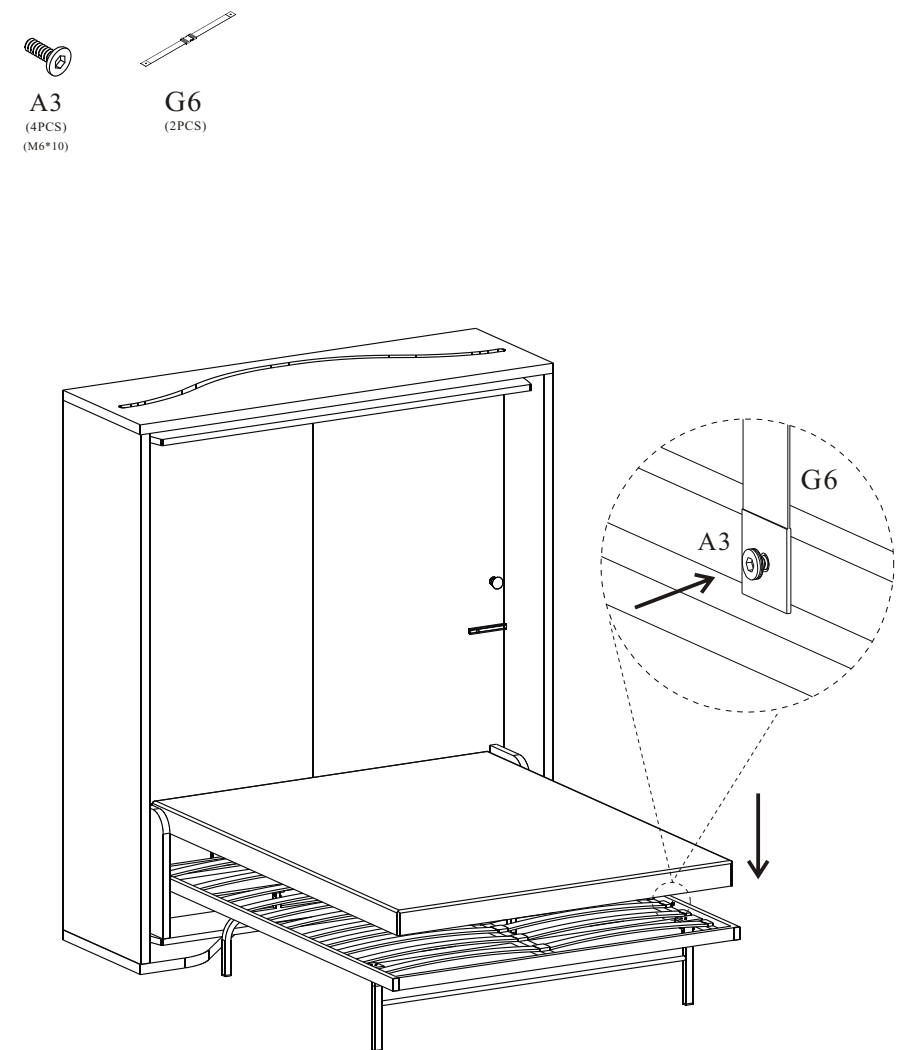

Step 23
Bedframe Fitting

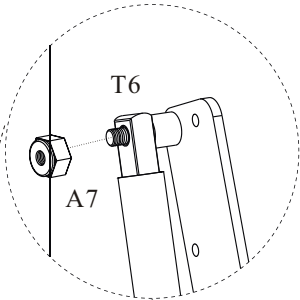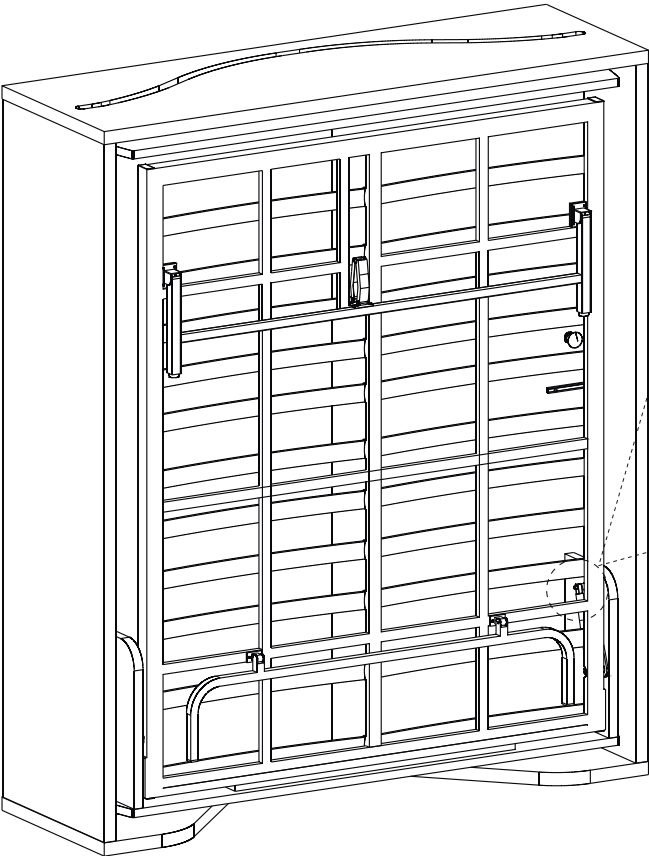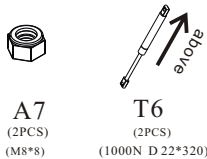

Panels and Bedframe:

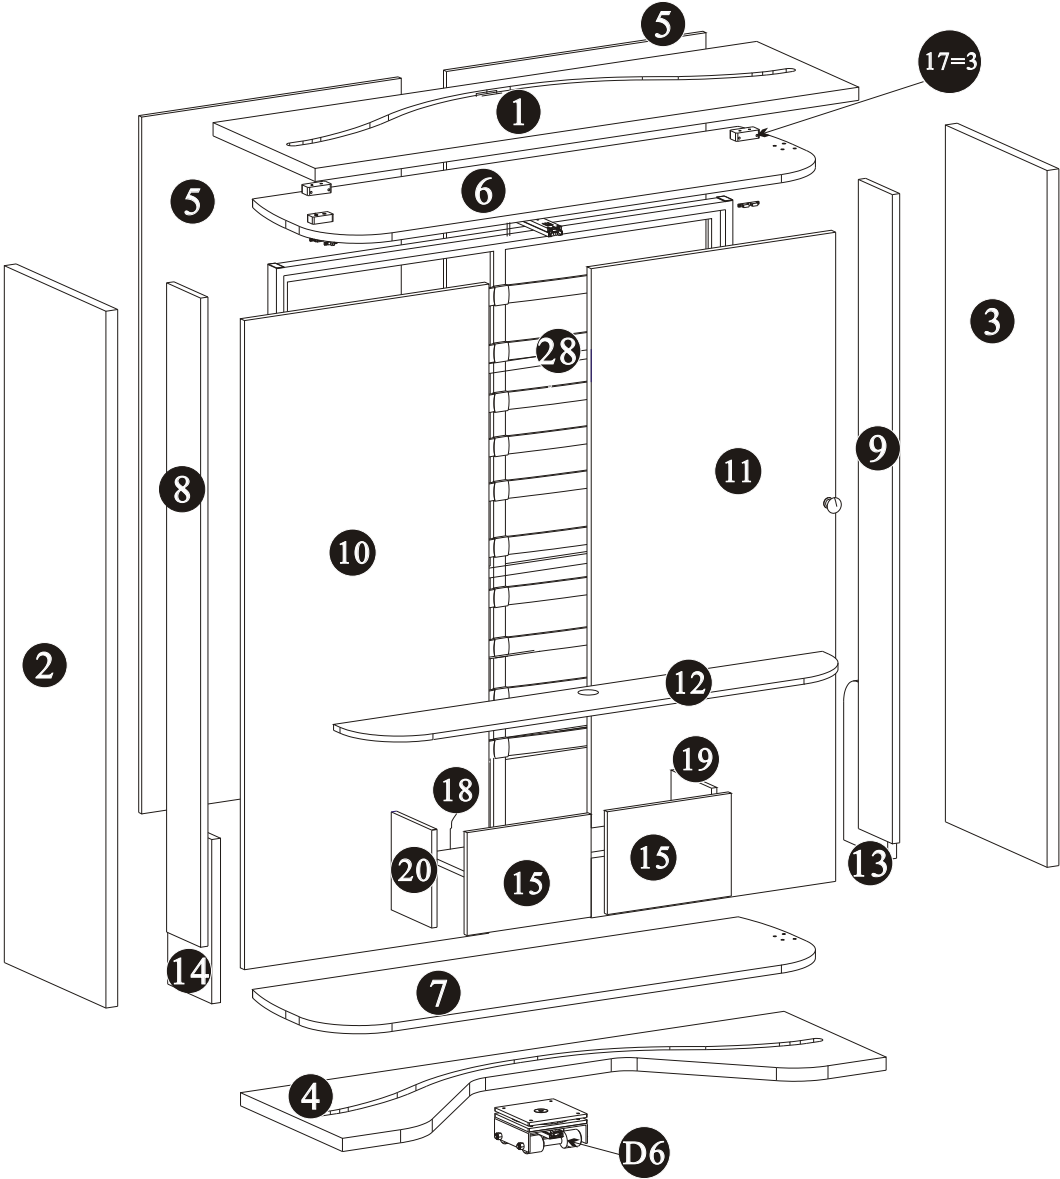

Step 1
Exterior Standing Frame Fitting



A10
(1PC)
(78*20*15)



A1
(24PCS)
(D15*13)



B1
(16PCS)
(D7*32)



G1
(20PCS)
(D6*30)



E1
(8PCS)
(D15*22)




F1
(8PCS)
(D8*47)



I1
(8PCS)
(D10*40)



S4
(4PCS)
(D7*48)

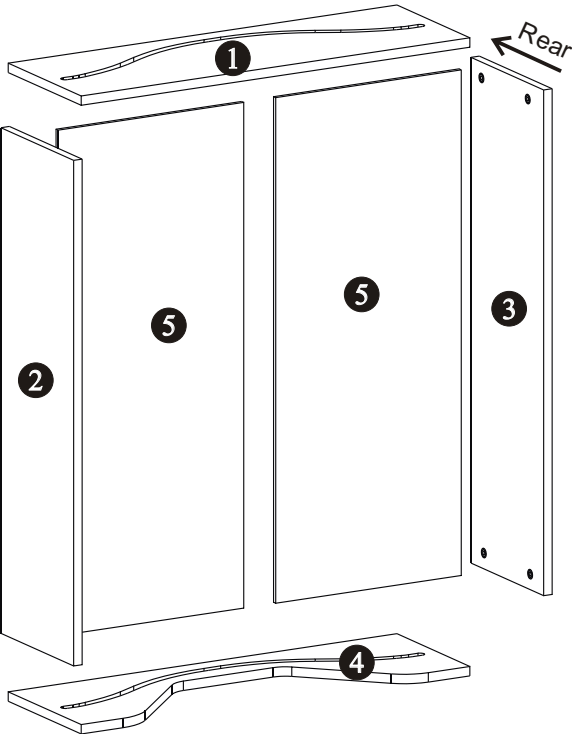


Step 22
Bedframe Fitting





F5
(2PCS)
(D24*60)





D7
(2PCS)
(D16)

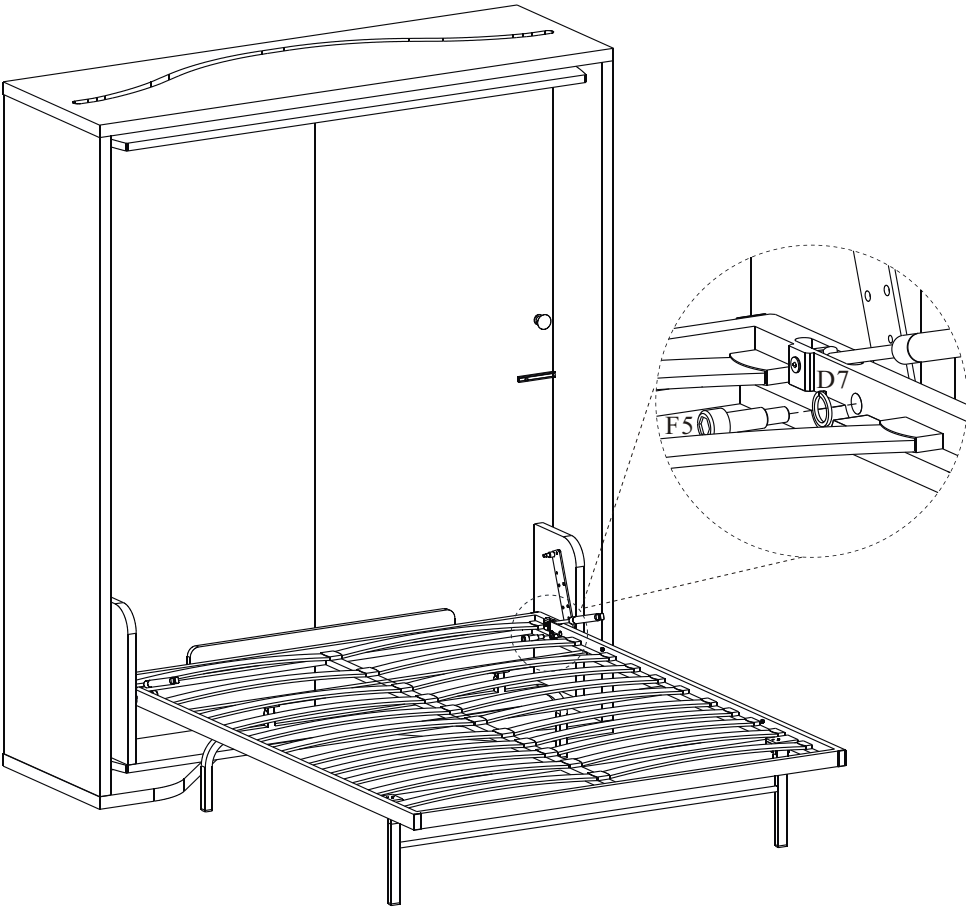

Step 21 Bedframe Fitting

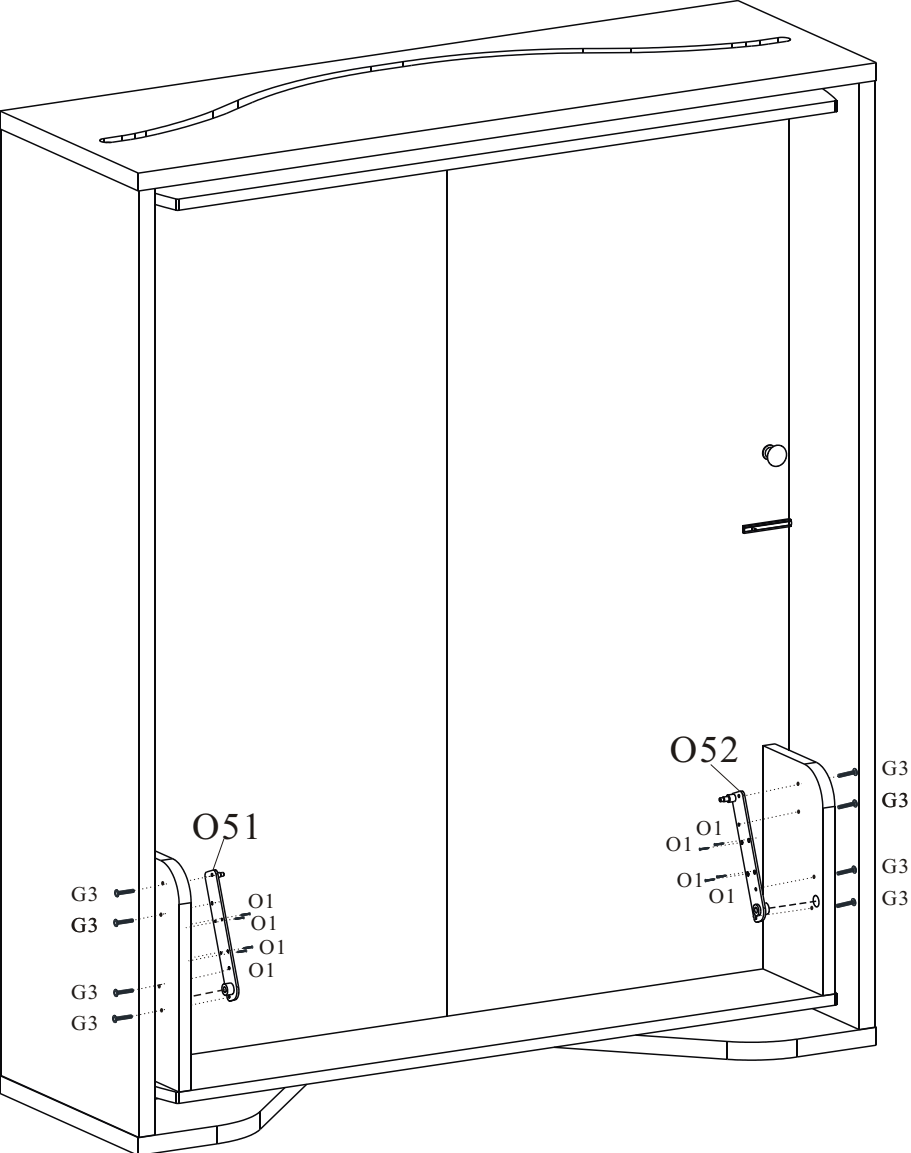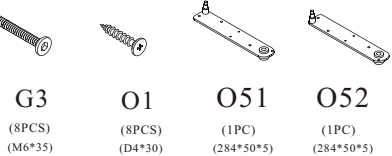


Step 2 Exterior Standing Frame Fitting

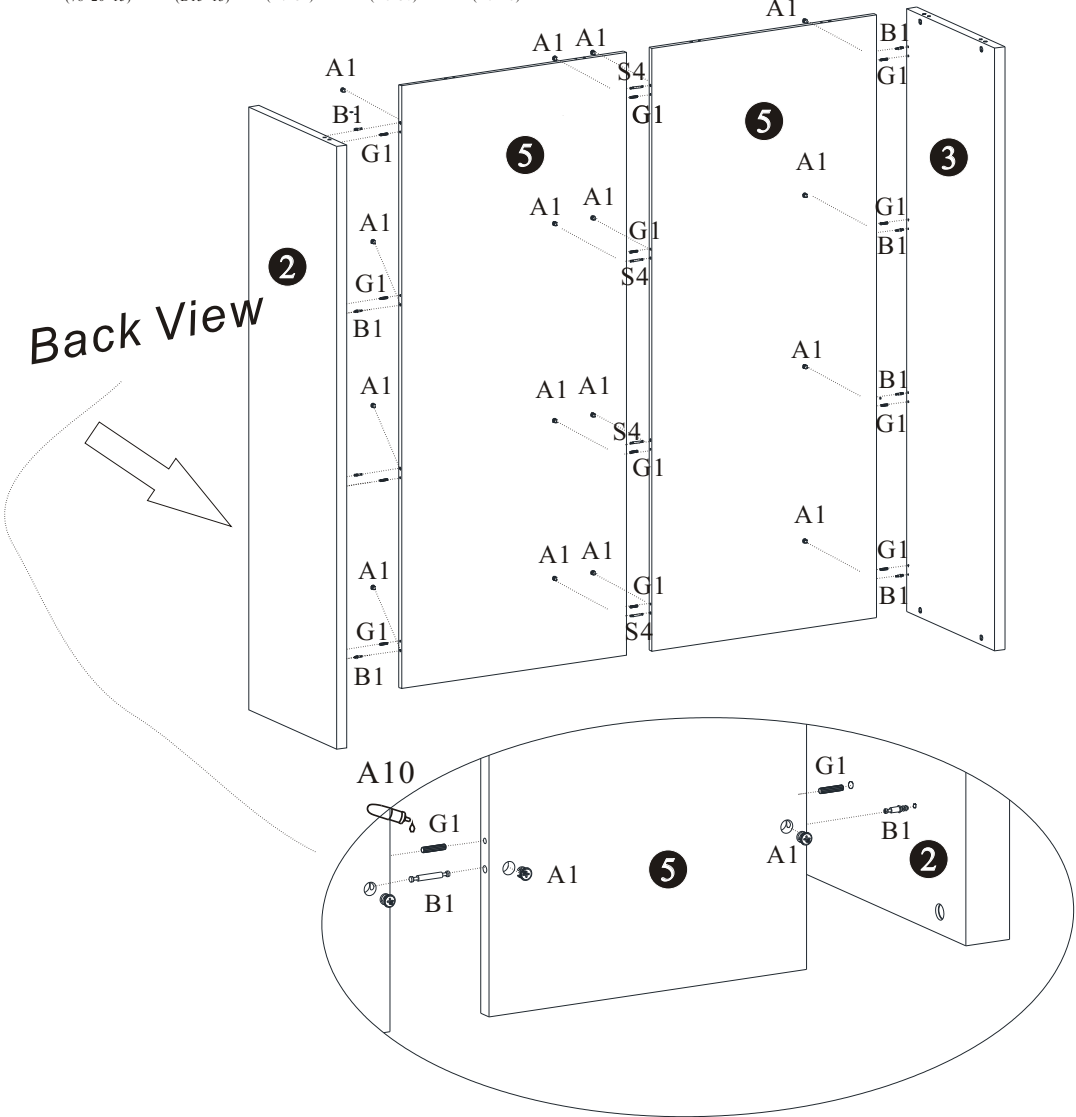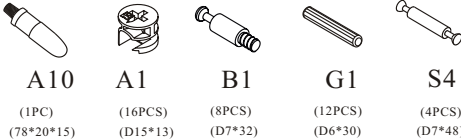


Step 3

Exterior Standing Frame Fitting


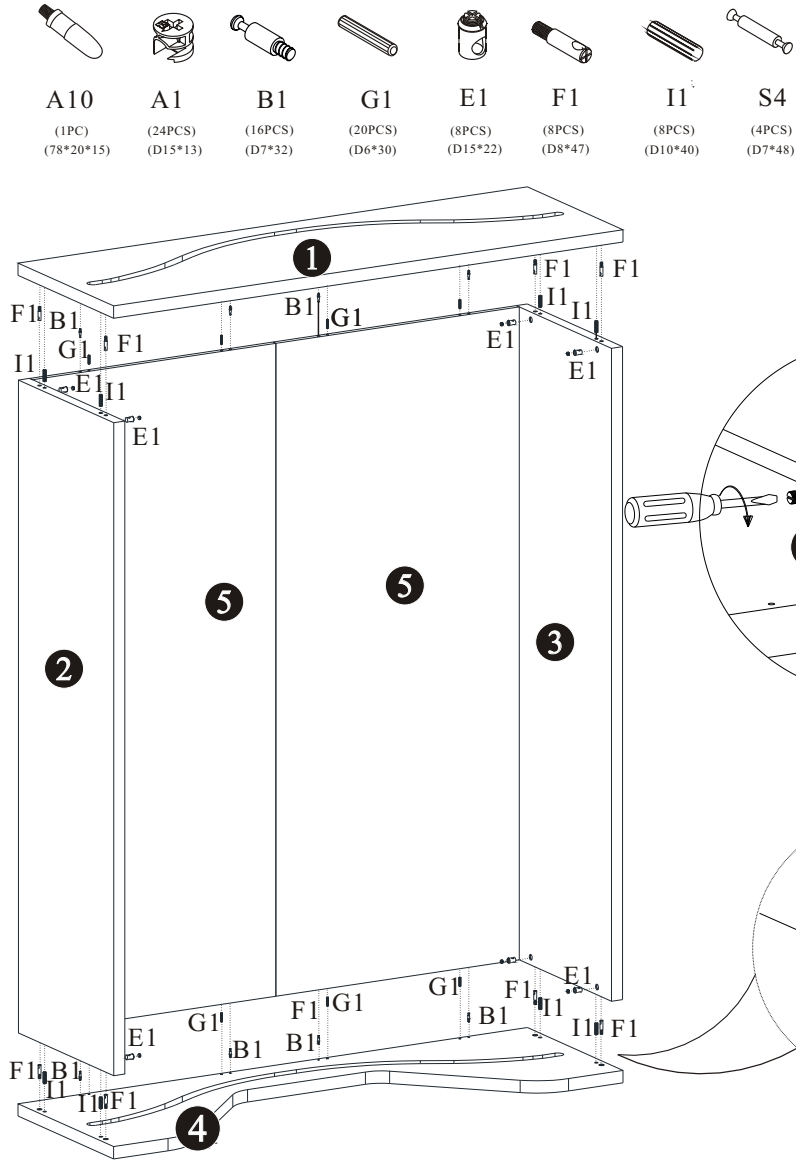


Step 20



Bedframe Fitting

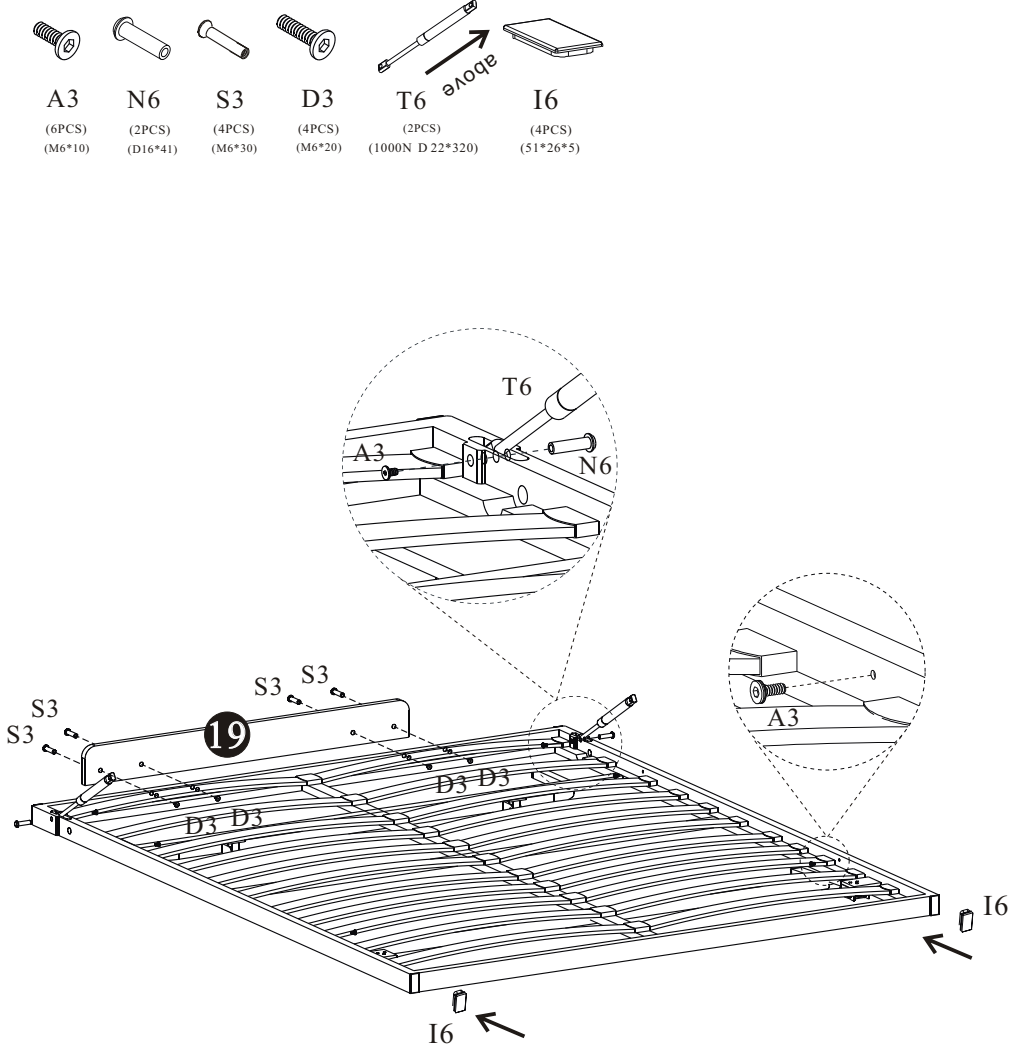

Step 19
Bedframe Fitting

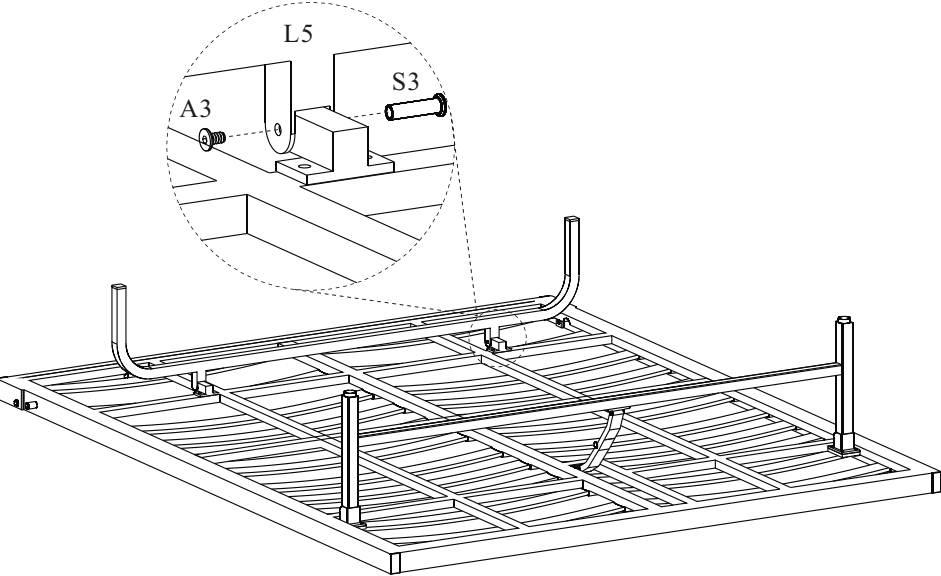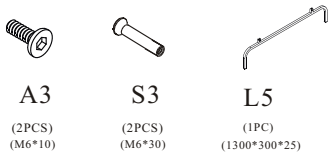

Step 4
Exterior Standing Frame Fitting

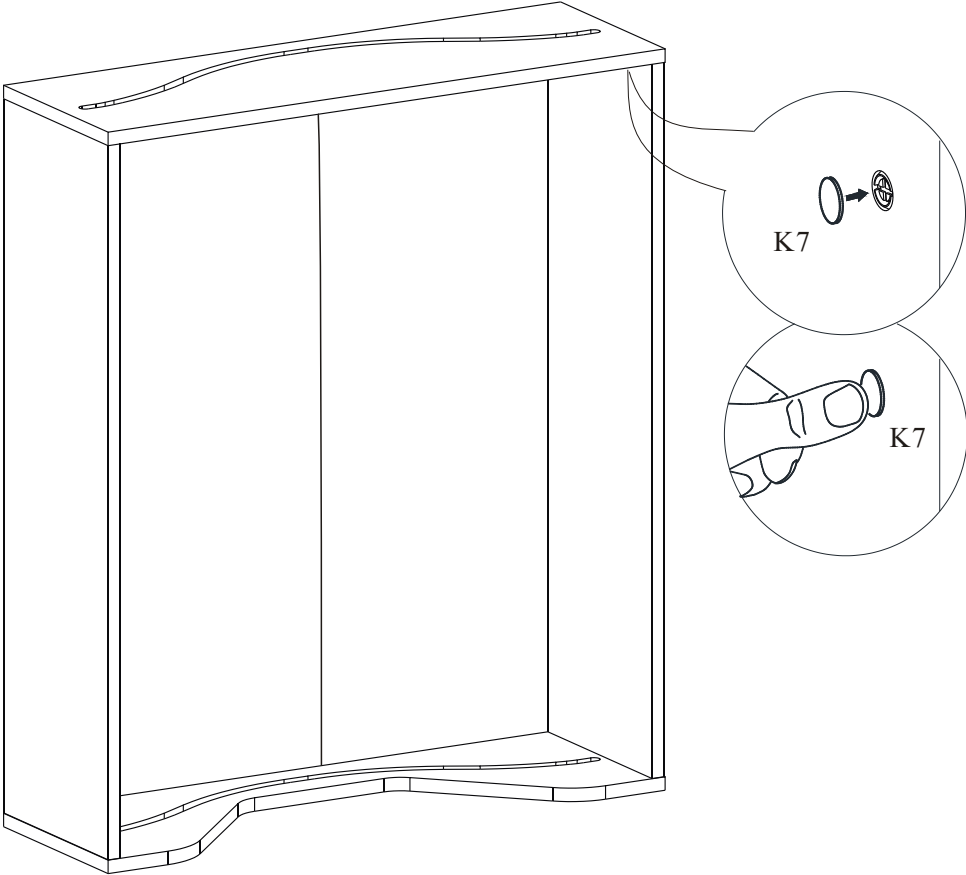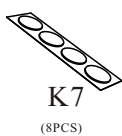


Step 5
Exterior Standing Frame Fitting

- 

A13
(2PCS)
(50*0.6)
- 

B13
(2PCS)
(50*1.0)
- 

C13
(2PCS)
(50*1.5)

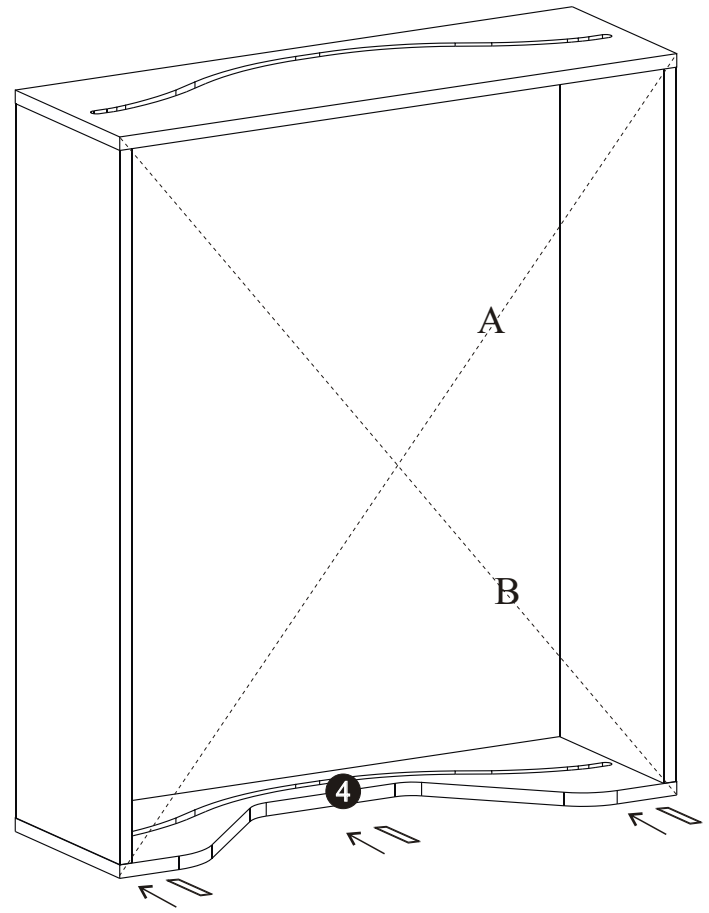

A = B ✓
A ≠ B ×

Step 18
Bedframe Fitting

- 


D3
(8PCS)
(M6*20)
- 

M5
(2PCS)
(60*60*25)
- 




A3
(8PCS)
(M6*10)
- 

V13
(1PC)
(1420*325*70)
- 



W13
(1PC)
(255*62*39)

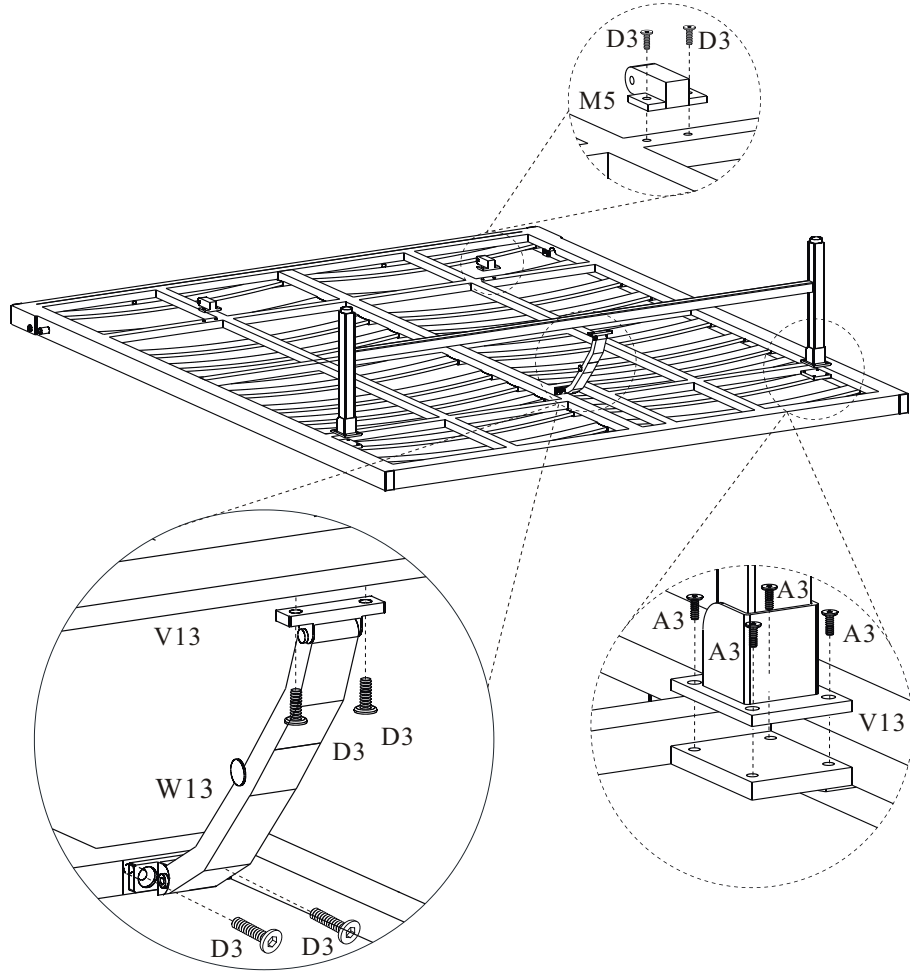



Step 17 Exterior Standing Frame Fitting

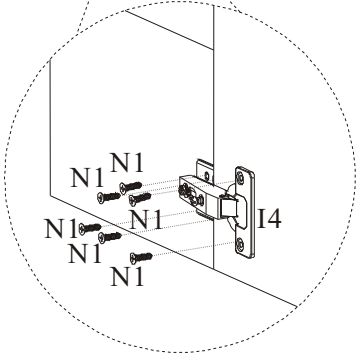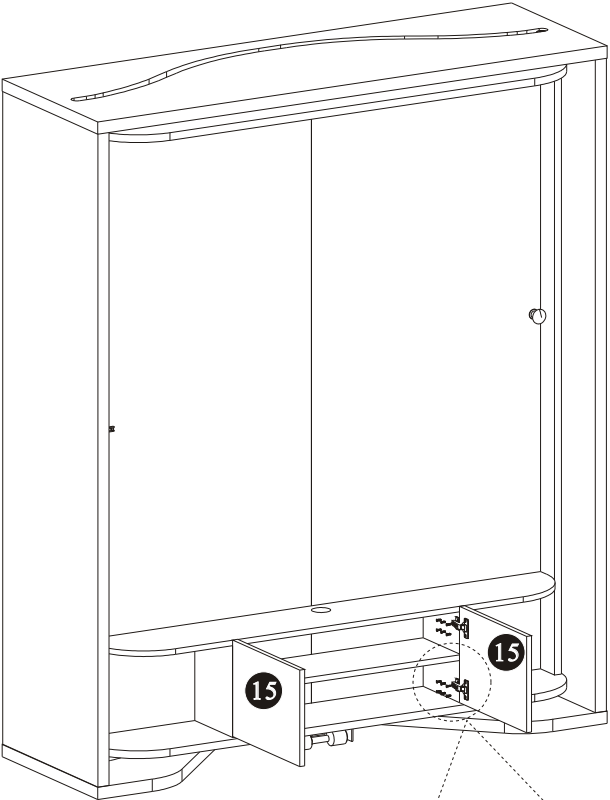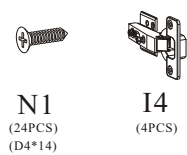


Step 6 Exterior Standing Frame Fitting

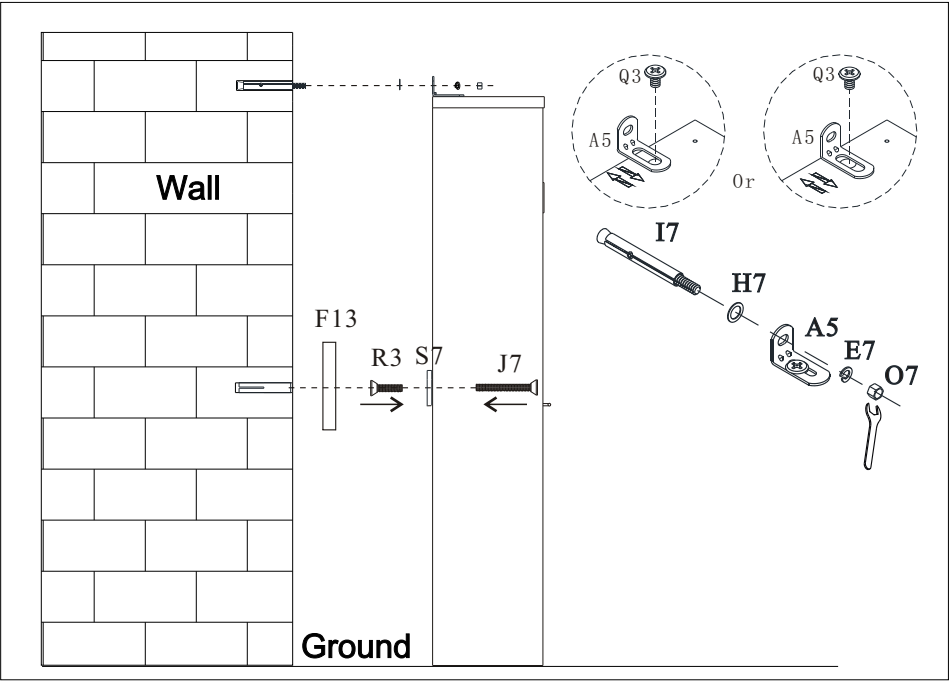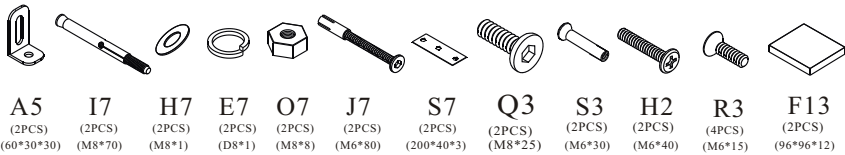

Step 7 Exterior Standing Frame Fitting

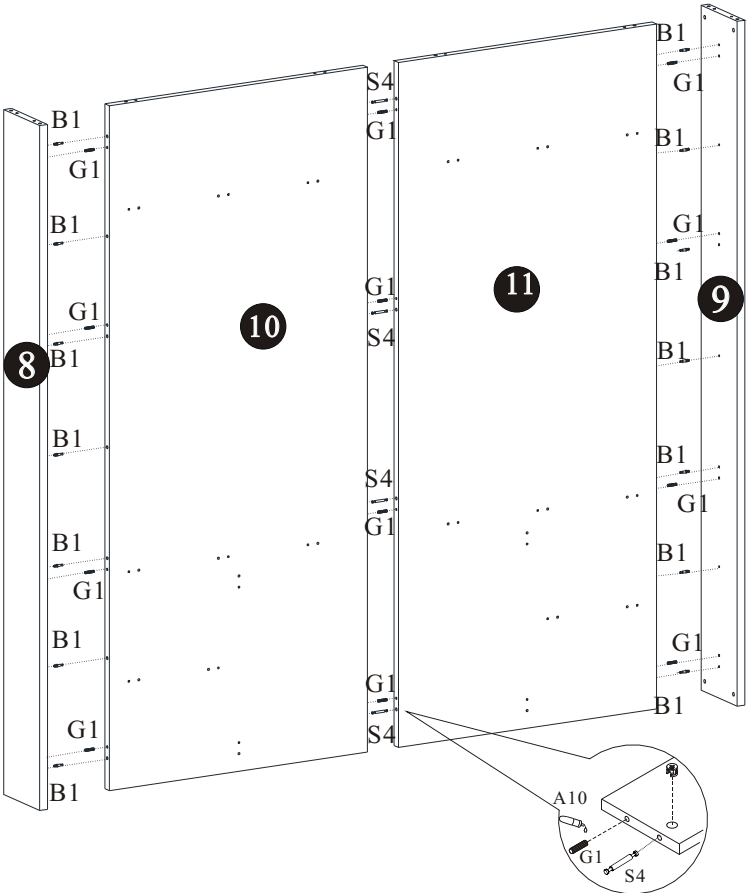
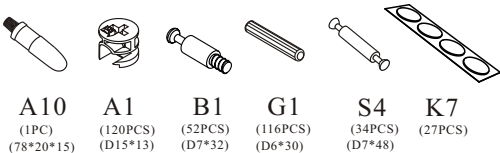


Connection parts installations instructions


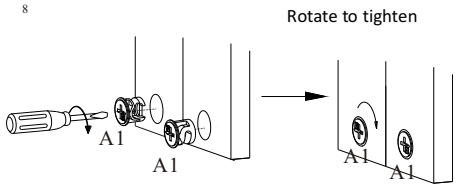


NOTE:
A. TO TIGHTEN, TURN THE CAM LOCK CLOCKWISE UNTIL THE ARROW OR "+" & "-" SIGNS POINT AWAY FROM THE CONNECTED GAP.
B. DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.



Step 16 Exterior Standing Frame Fitting

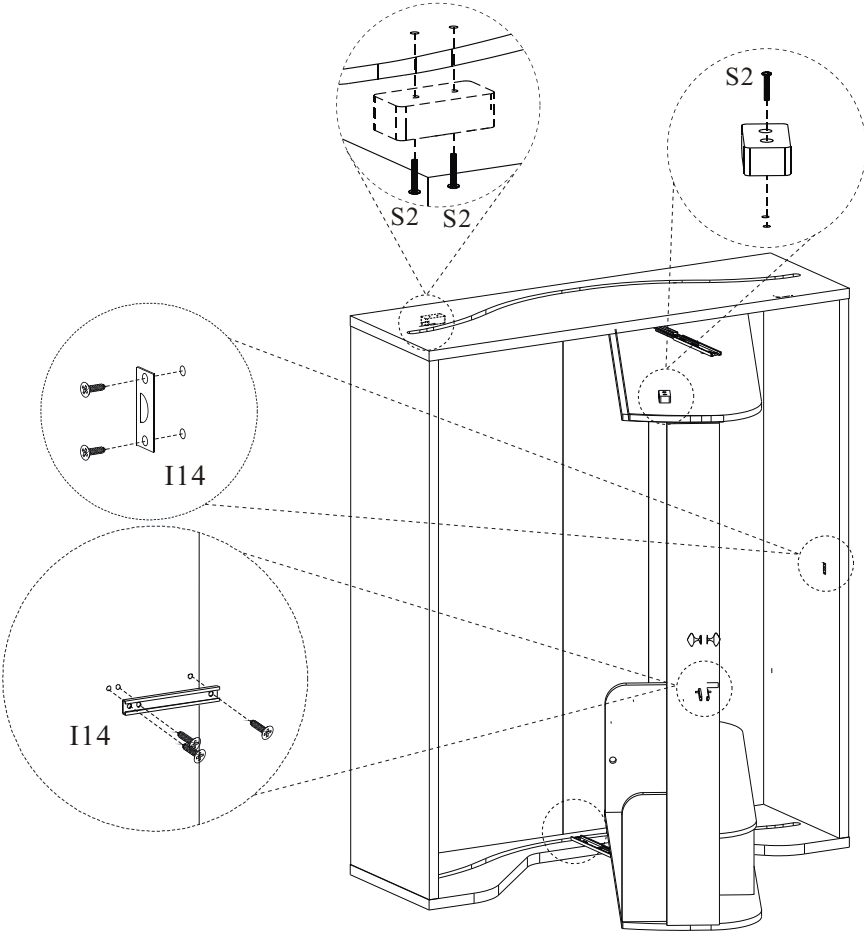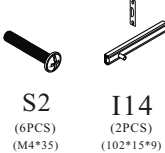

Step 15 Bedframe Fitting

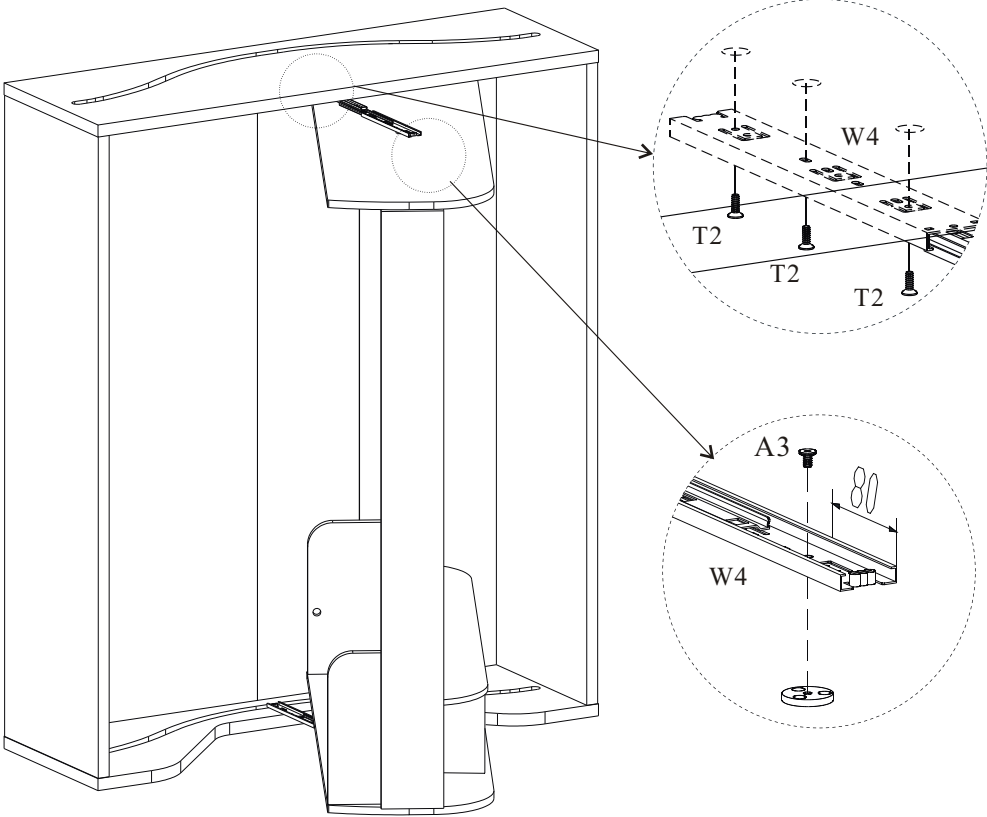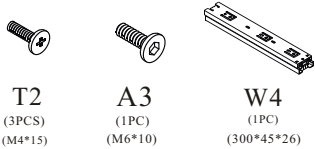

Step 8 Exterior Standing Frame Fitting

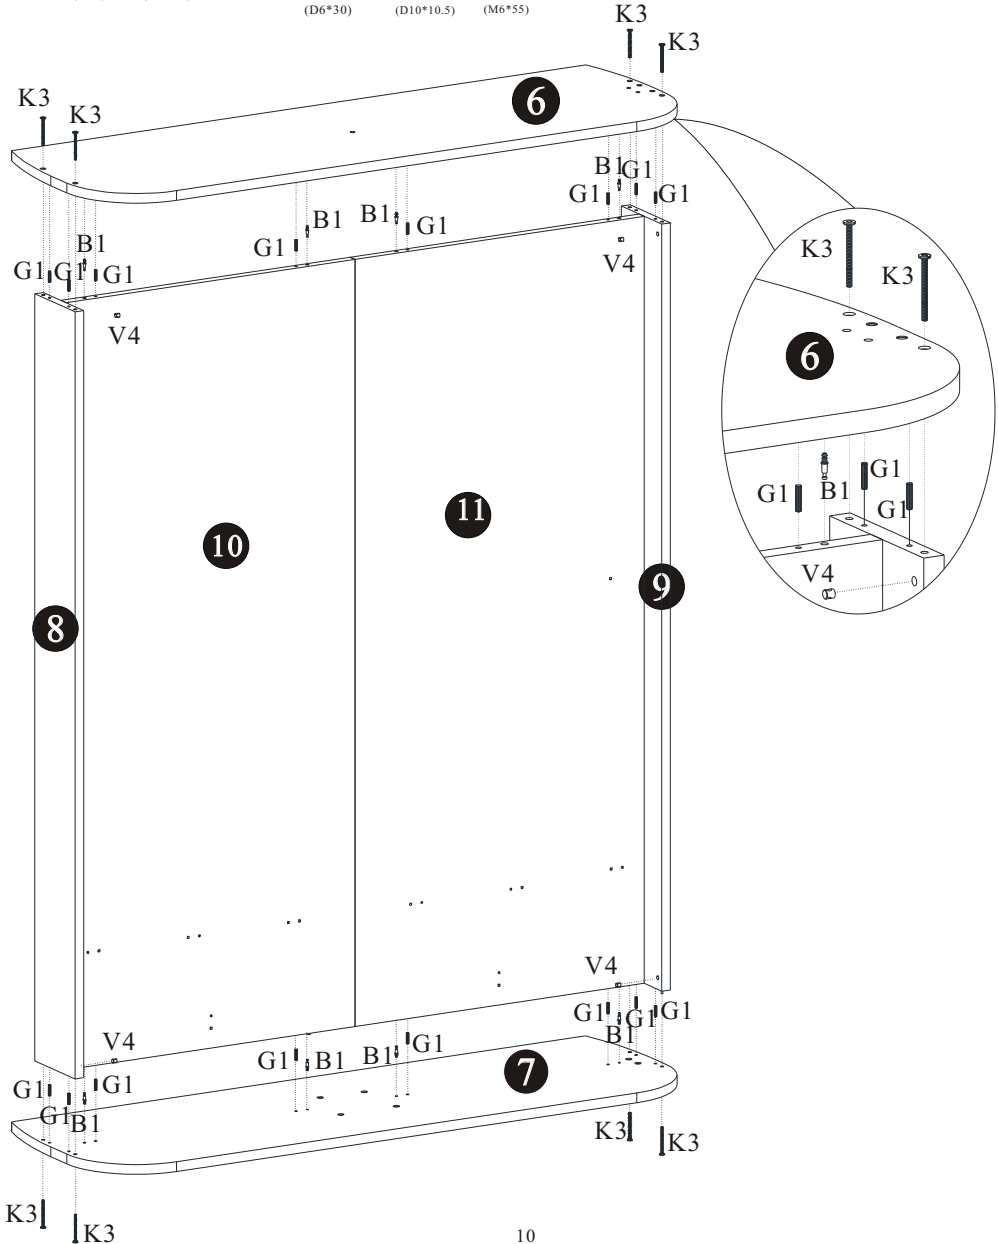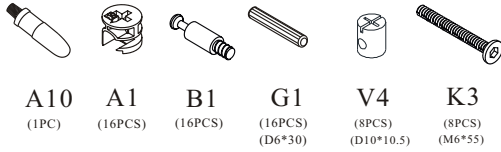

Step 9

Exterior Standing Frame Fitting Bedframe Fitting



A10
(1PC)
(78*20*15)

A1
(120PCS)
(D15*13)

B1
(52PCS)
(D7*32)

G1
(116PCS)
(D6*30)



J1
(4PCS)
(D5*25*20)


U3
(4PCS)
(D8*35)

D3
(4PCS)
(M6*20)

S3
(2PCS)
(M6*30)

U7
(1PC)
(90*60*93)

D6
(1PC)
(200*200*103)

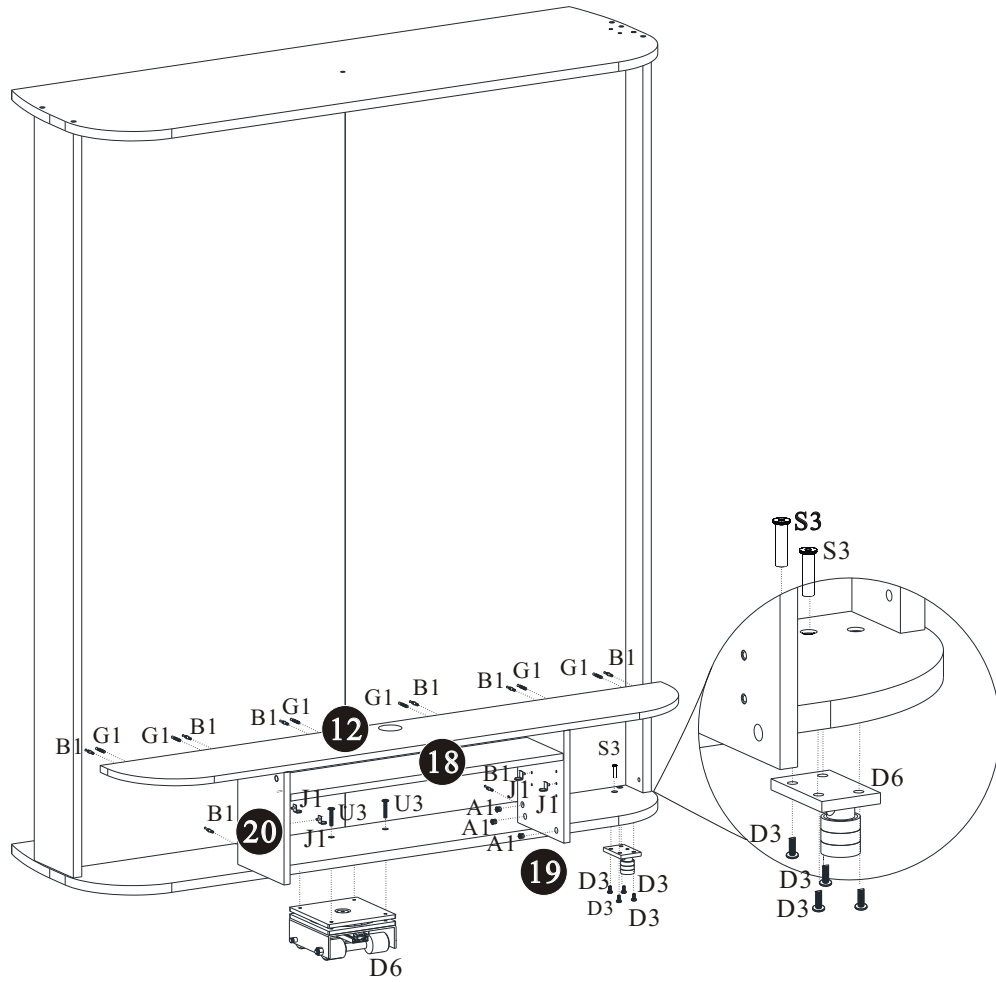


Step 14


Bedframe Fitting



T2
(2PCS)
(M4*15)

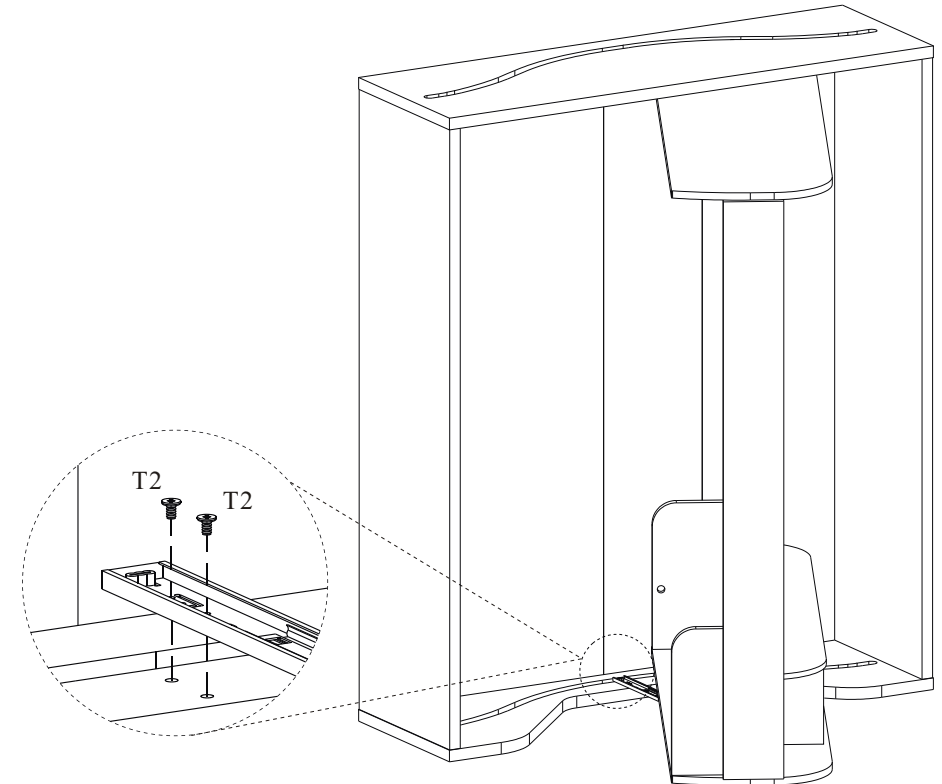


Step 13

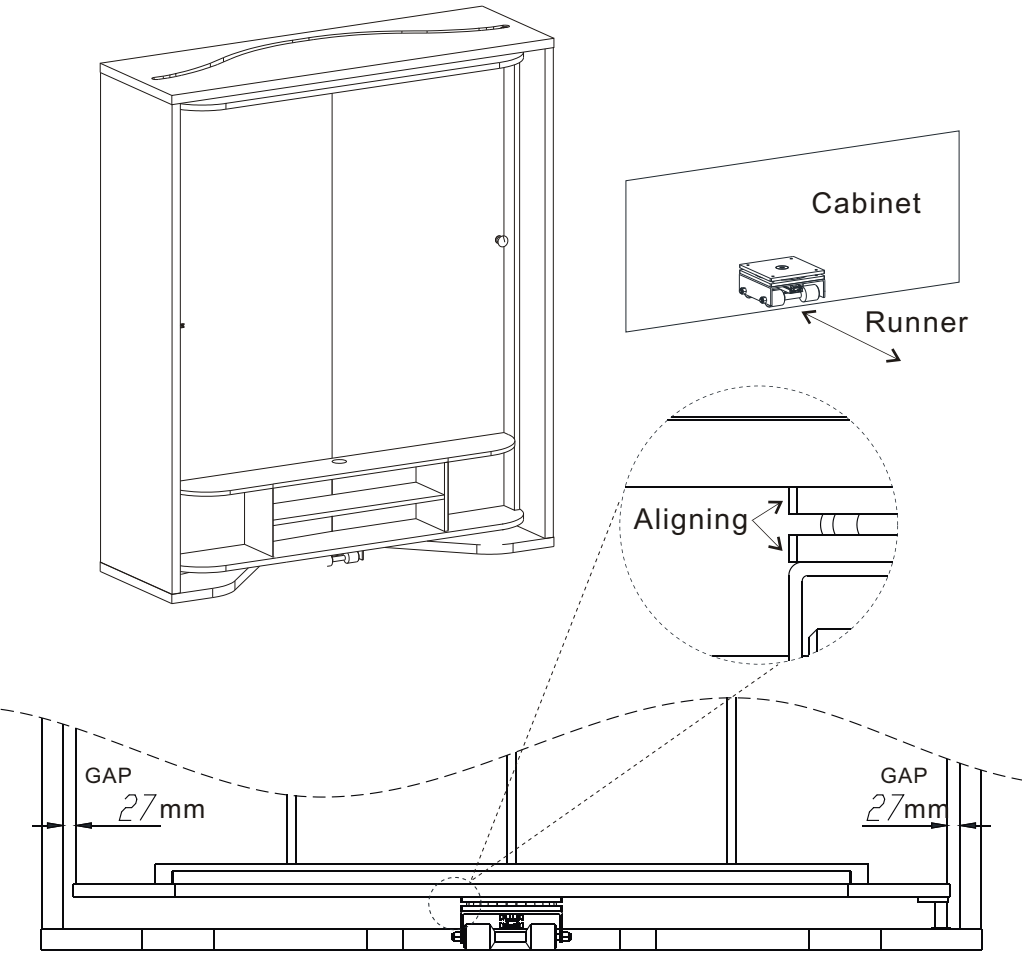


Step 10
Exterior Standing Frame Fitting

- | | | | | | | |
|--------------|--------------------------|-------------------------|-------------------------|----------------------------|-------------------------|--------------------------|
| | | | | | | |
| A10
(1PC) | A1
(4PCS)
(D15*13) | B1
(4PCS)
(D7*32) | G1
(4PCS)
(D6*30) | V4
(6PCS)
(D10*10.5) | L3
(6PCS)
(M6*60) | I1
(4PCS)
(D10*40) |

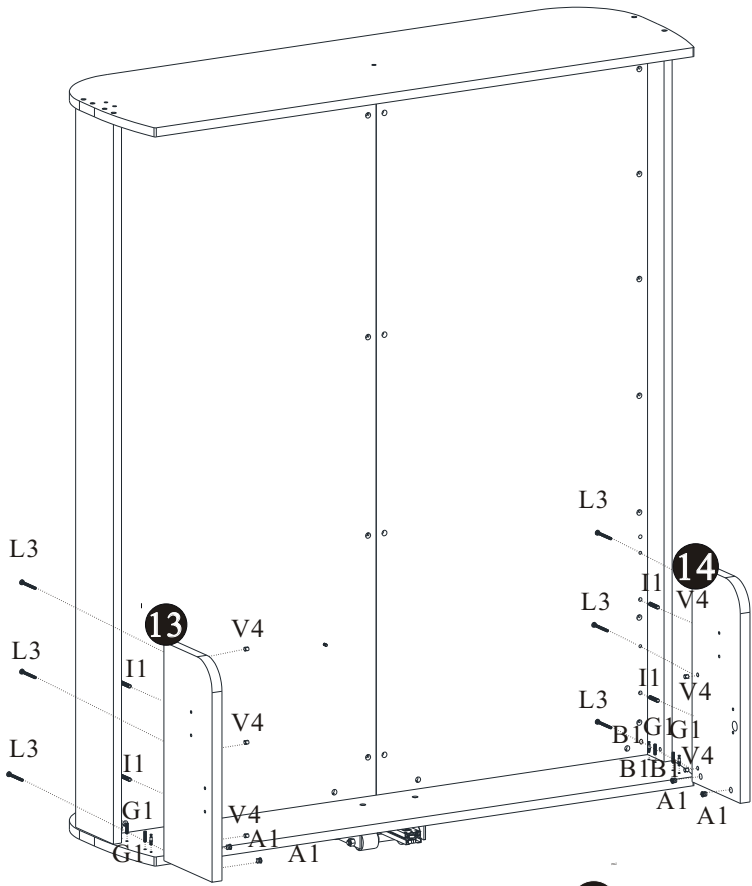


Step 11

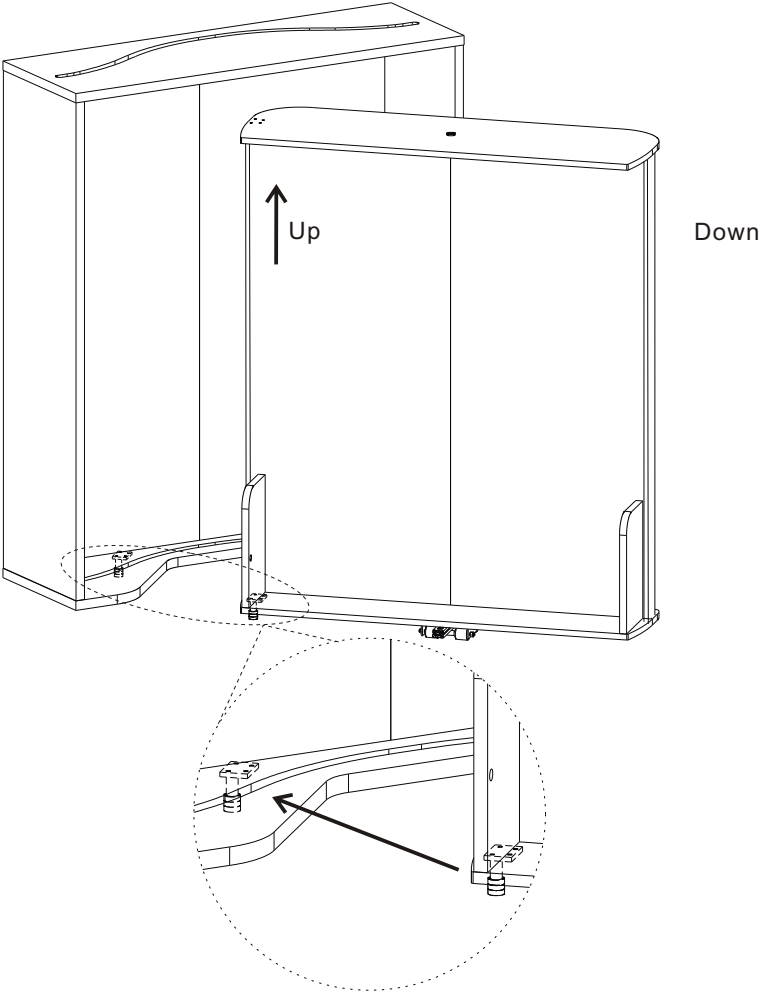

Step 12
Bedframe Fitting

U13 (1PC) (90*60*93)	D3 (4PCS) (M6*20)	S3 (2PCS) (M6*30)	N1 (6PCS) (D4*14)	Q1 (4PCS) (D3*16)	R14 (1PCS) (86*86*40)

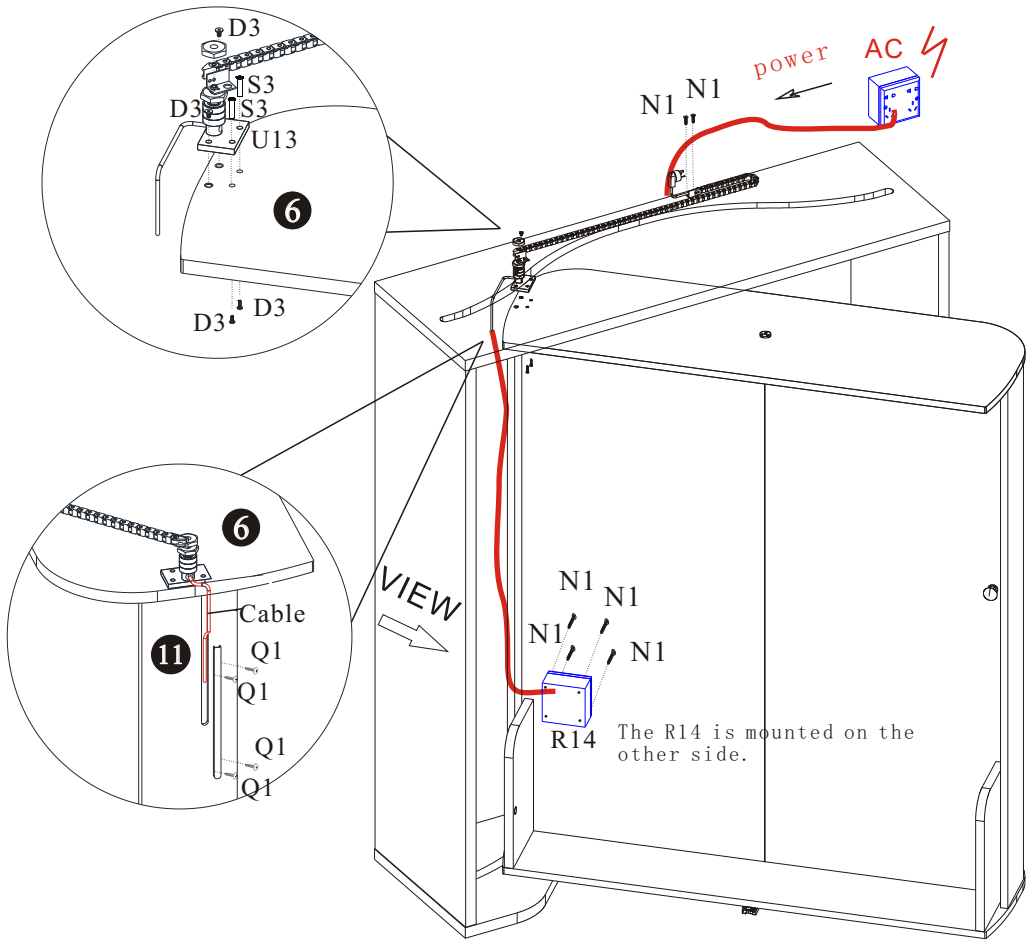

The power supply is connected to the R14 switch box.