




Assembly Manual


FJ-S2 Vertical Tilting Bed

UN-1205 Hardware

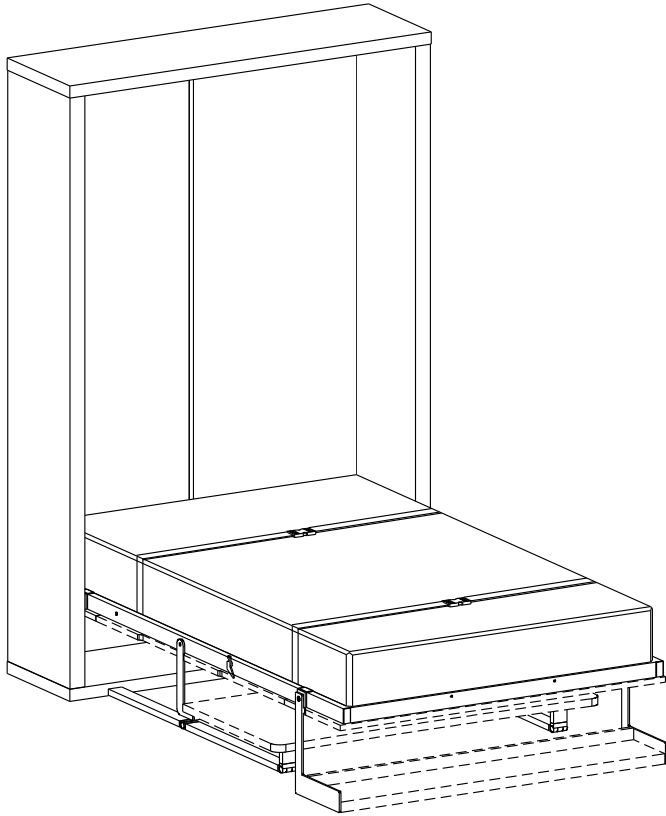


NOTE:

- A. CHILDREN (BELOW 18 YEARS OLD) ARE FORBIDDEN USING THIS FURNITURE.
- B. WHEN FOLDING DOWN THE BED, STAY AWAY FROM THE BENEATH OF THE BED. WHEN FOLDING UP THE BED, STAY AWAY FROM THE MATTRESS. MIND THE GAP AND THE BOOK SHELF HOLDERS DURING THE MOTION OF THE BED.

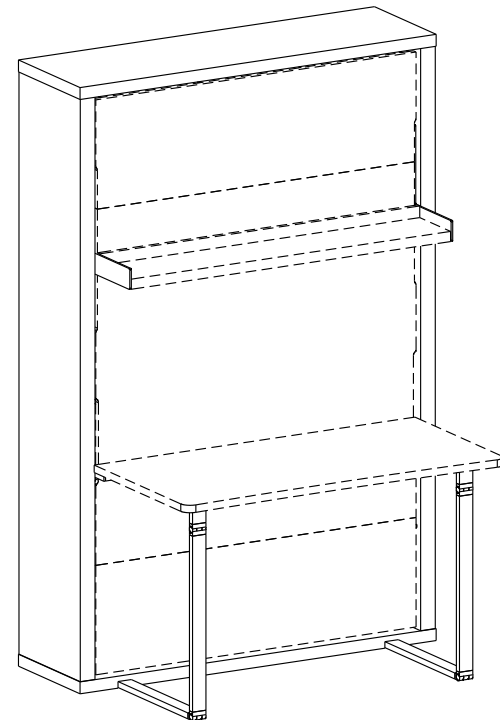


Hardware List

Exterior Standing Frame Fitting

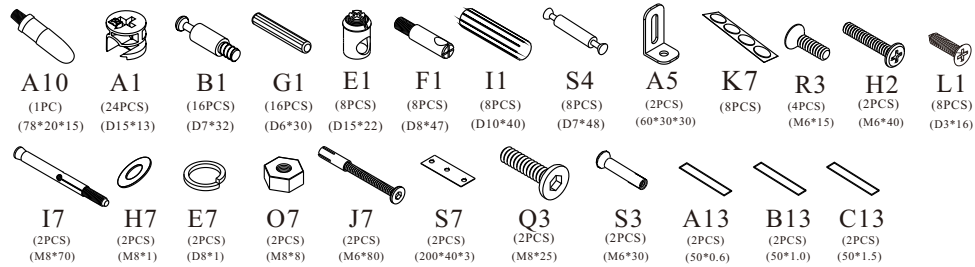

Bedframe Fitting

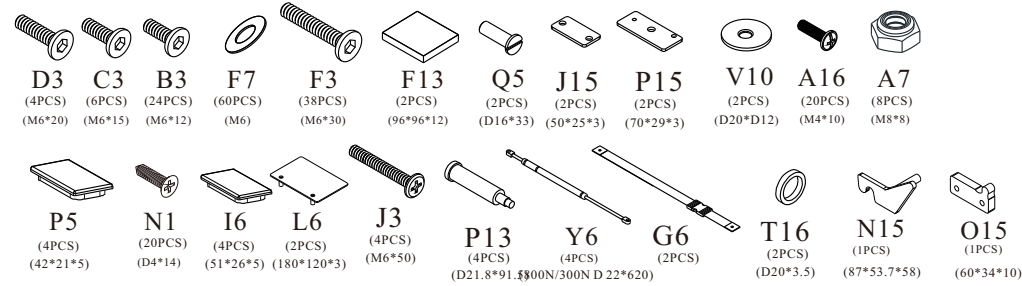


Bookshelf Fitting





Pre-assembled Fitting

There hardware have been assembled into the unit,so you don't need to look for them into the bags

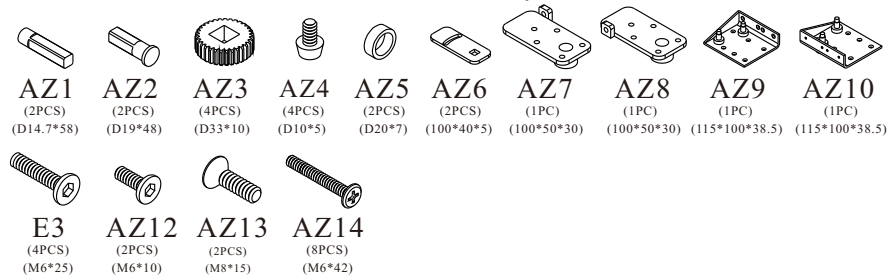


Step 23

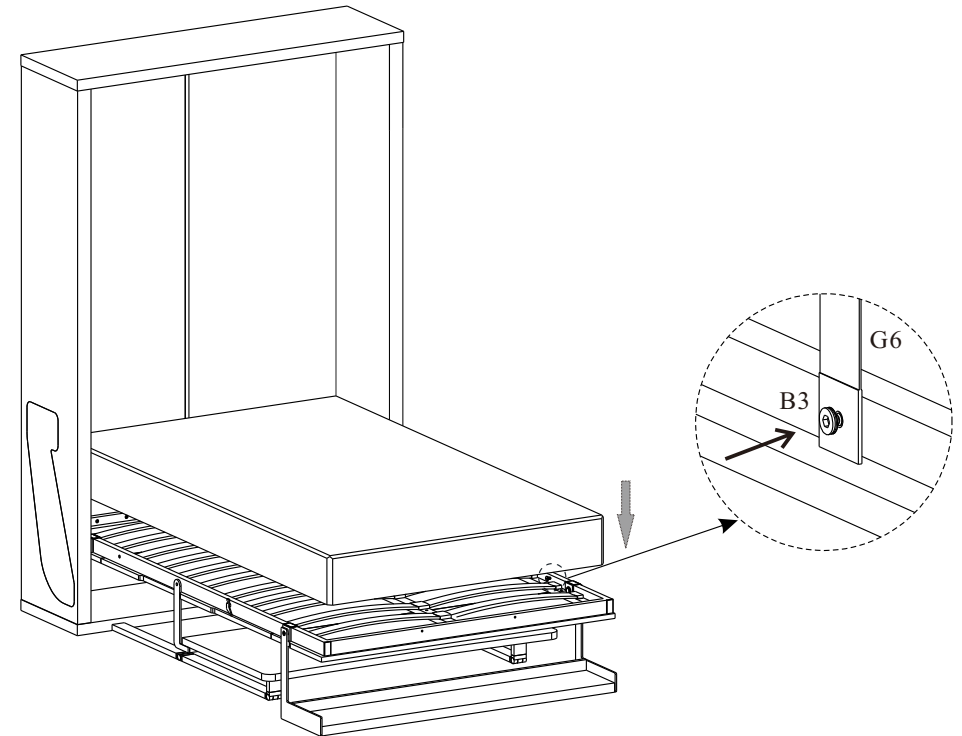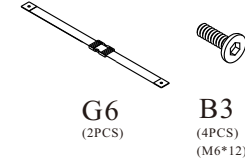


Step 22




L1
(8PCS)
(D3*16)

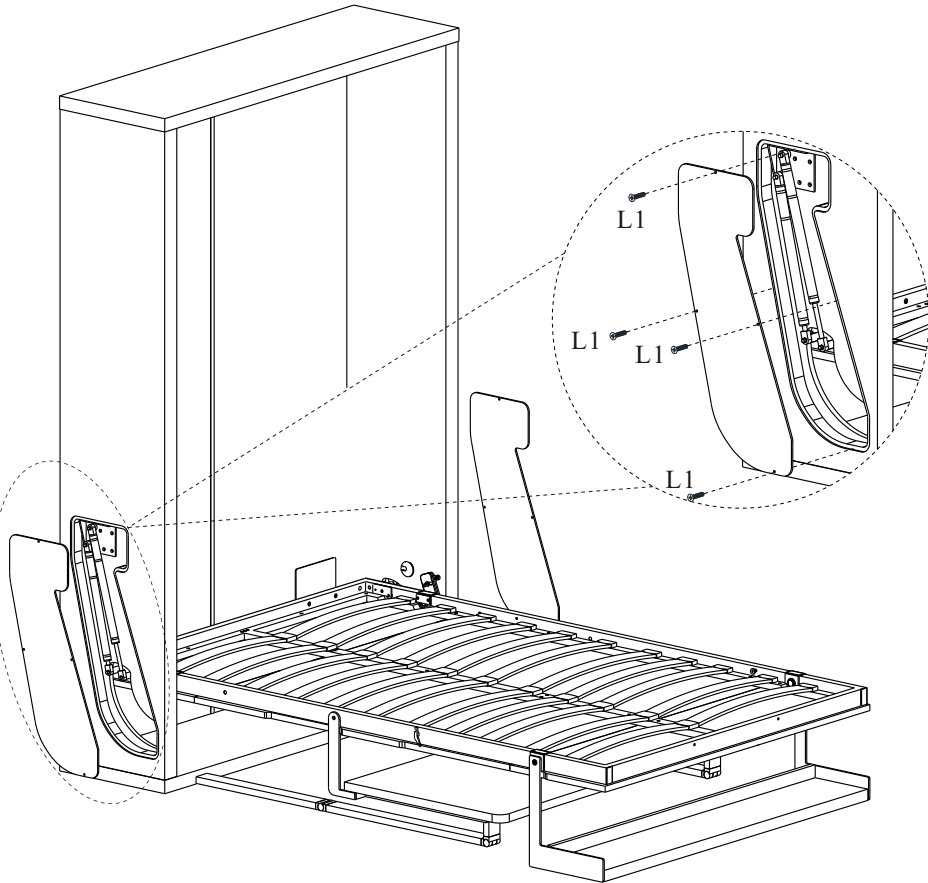



Panels and Bedframe:

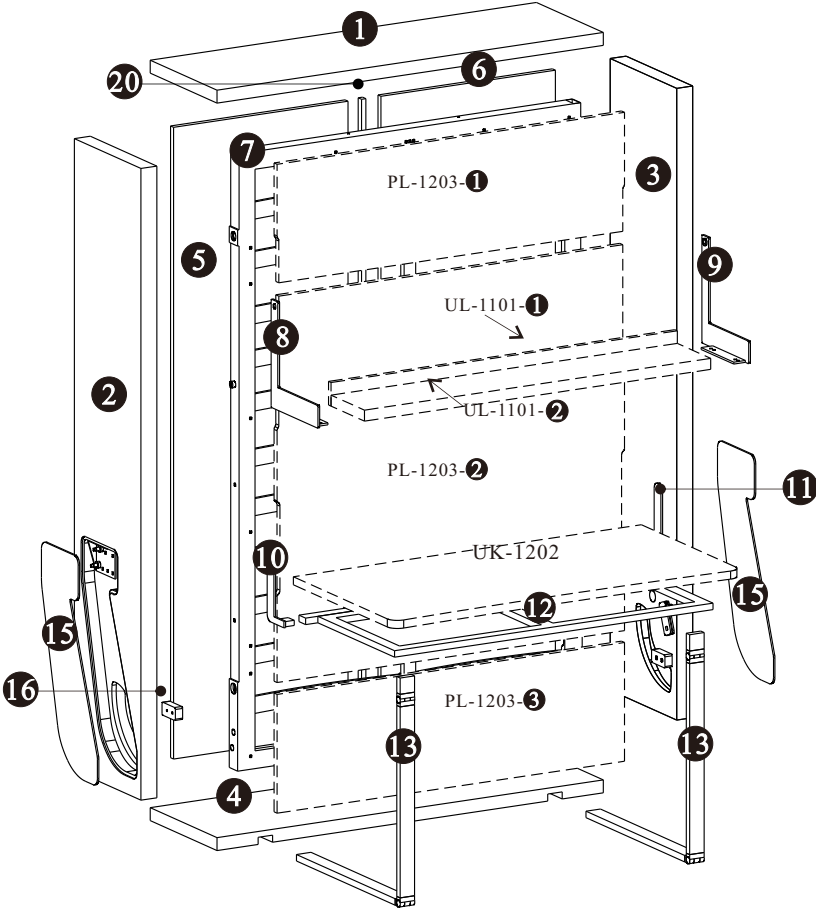



Exterior Standing Frame Fitting

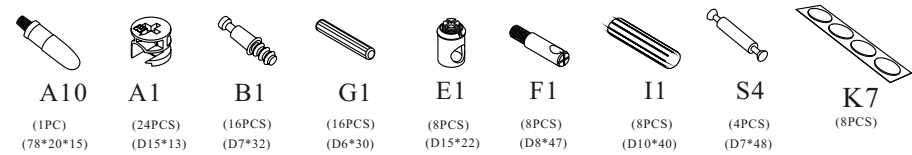

Pre-assembled Fitting

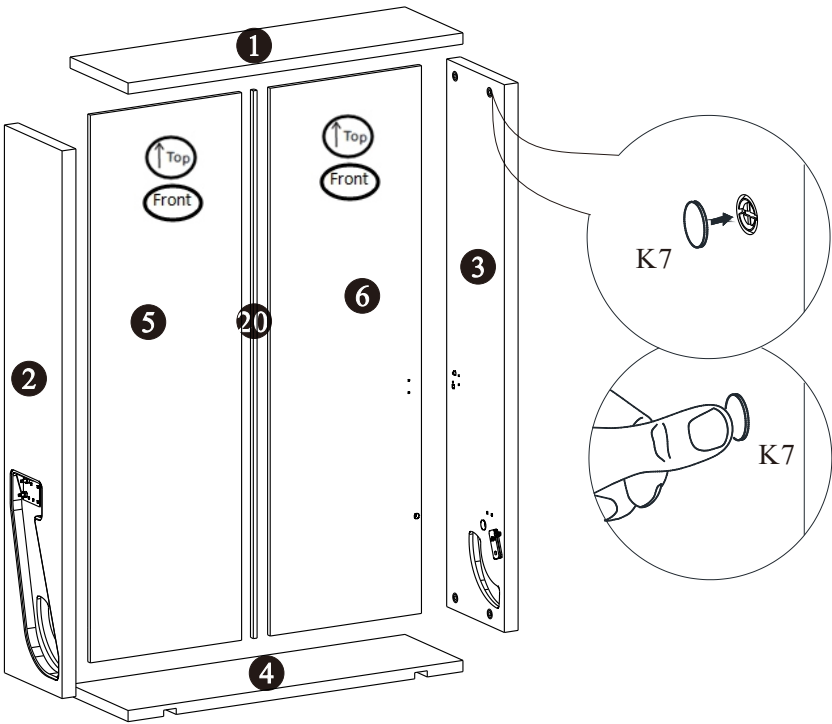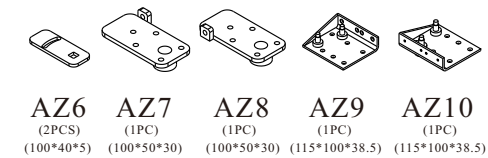


Step 21

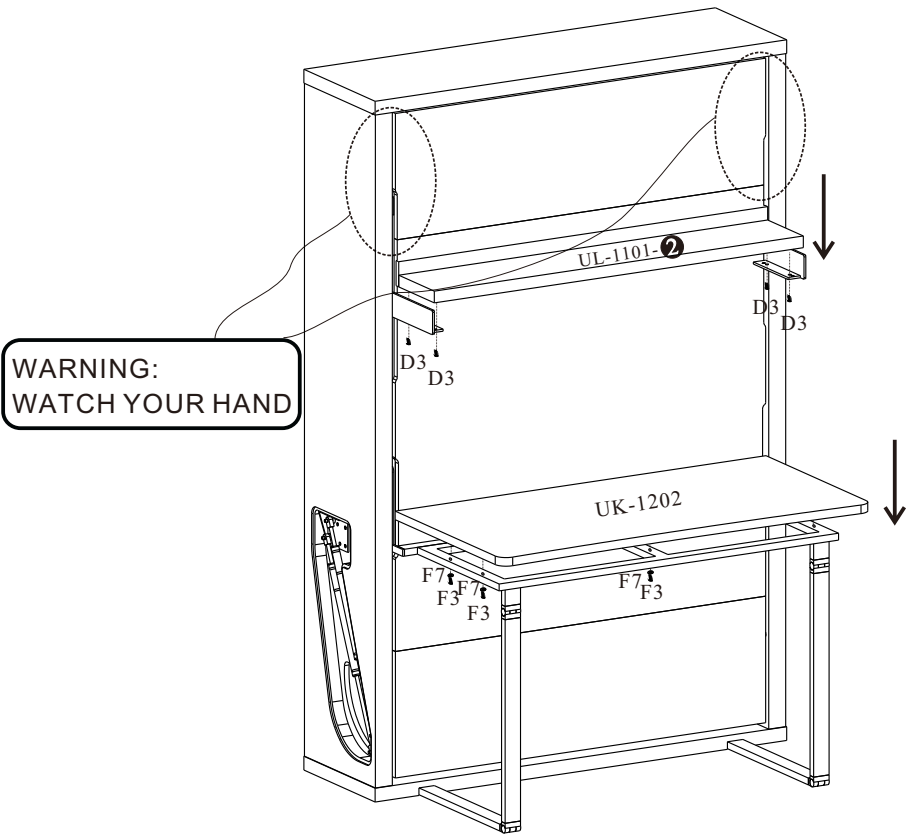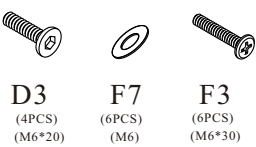

Step 20

- 

O1
(4PCS)
(D4*30)

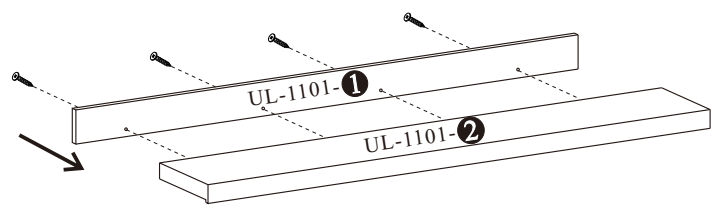

Step 1


- 

A10
(1PC)
(78*20*15)
- 

A1
(24PCS)
(D15*13)
- 

G1
(16PCS)
(D6*30)
- 

S4
(4PCS)
(D7*48)

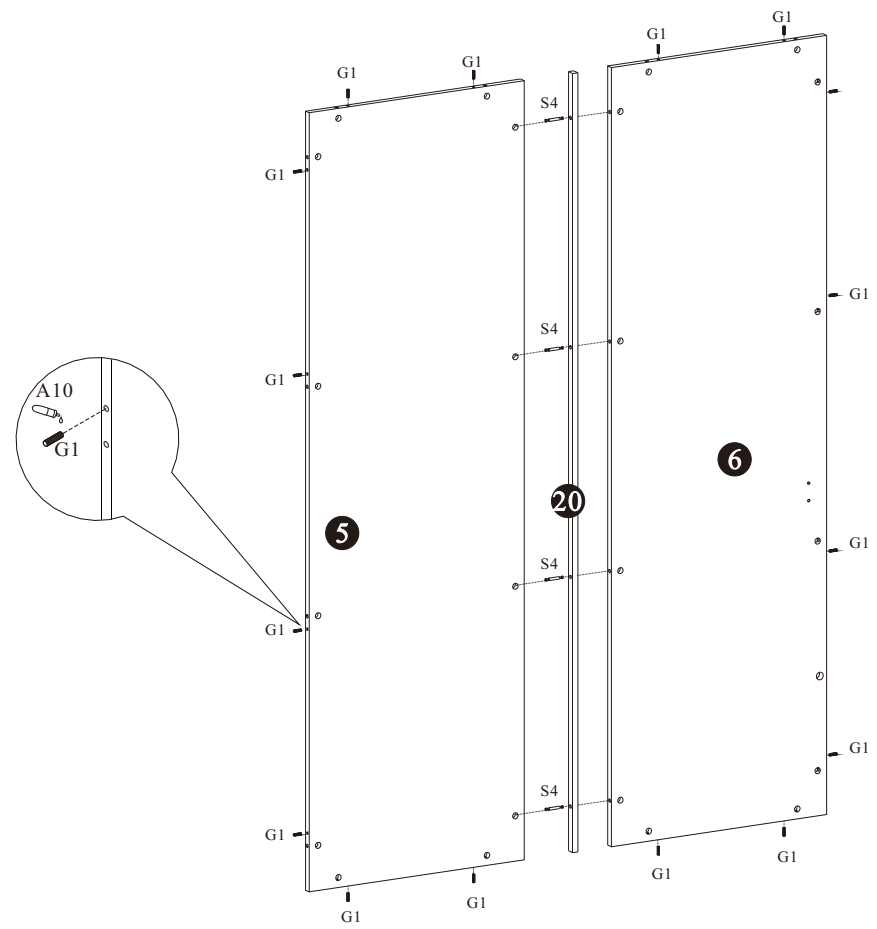

Step 2


- 

A10
(1PC)
(78*20*15)
- 

B1
(16PCS)
(D7*32)
- 

G1
(16PCS)
(D6*30)
- 

I1
(8PCS)
(D10*40)

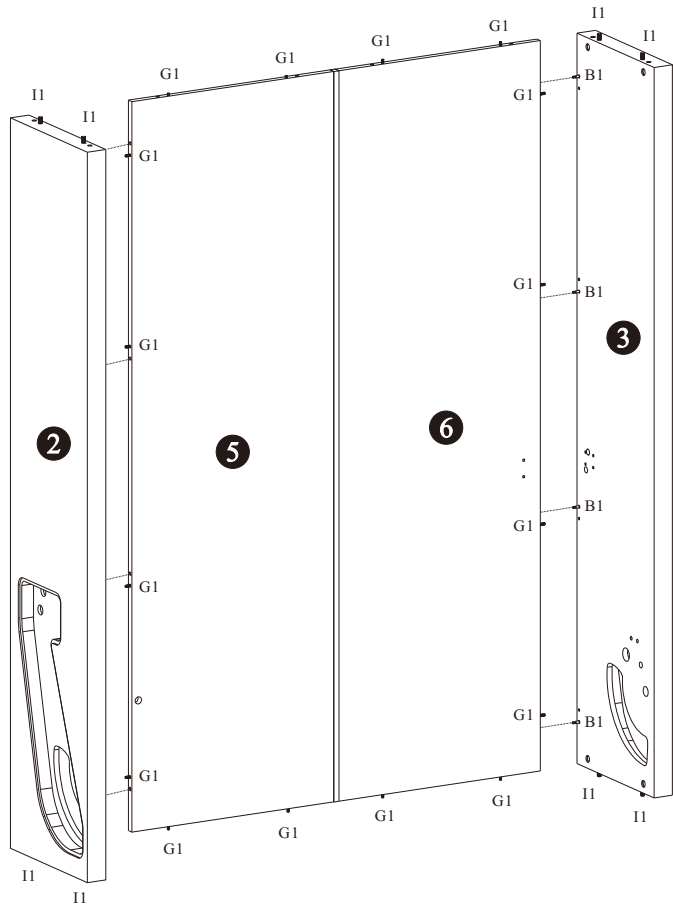


Step 19

- 

F7
(4PCS)
(M6)
- 

C3
(4PCS)
(M6*15)

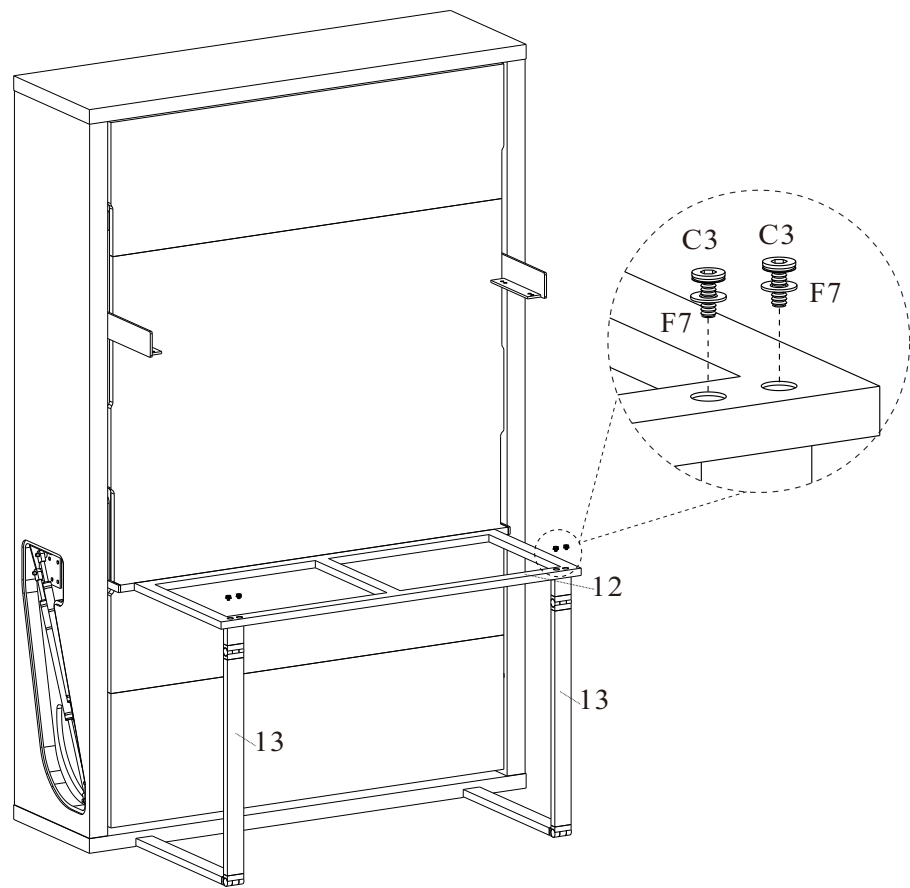


Step 18

- 

B3
(2PCS)
(D6*12)
- 

V10
(2PCS)
(D20*D12)
- 

Q5
(2PCS)
(D16*33)

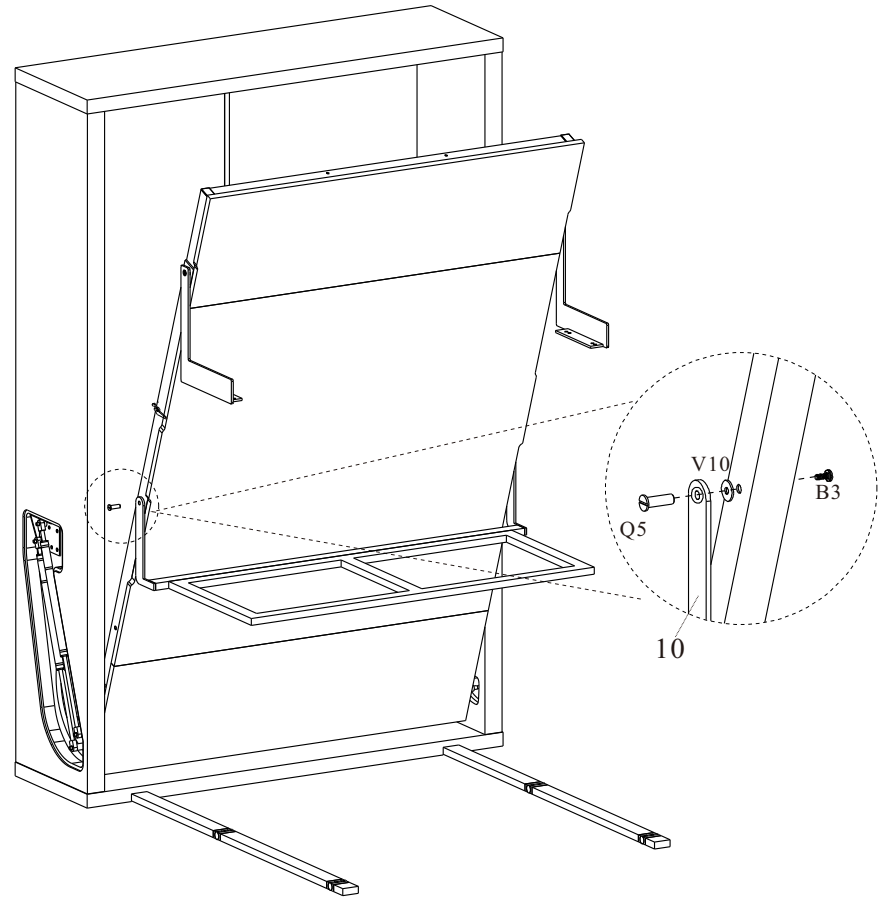

Step 3


- 

A10
(1PC)
(78*20*15)
- 

A1
(24PCS)
(D15*13)
- 

E1
(8PCS)
(D15*22)
- 


F1
(8PCS)
(D8*47)

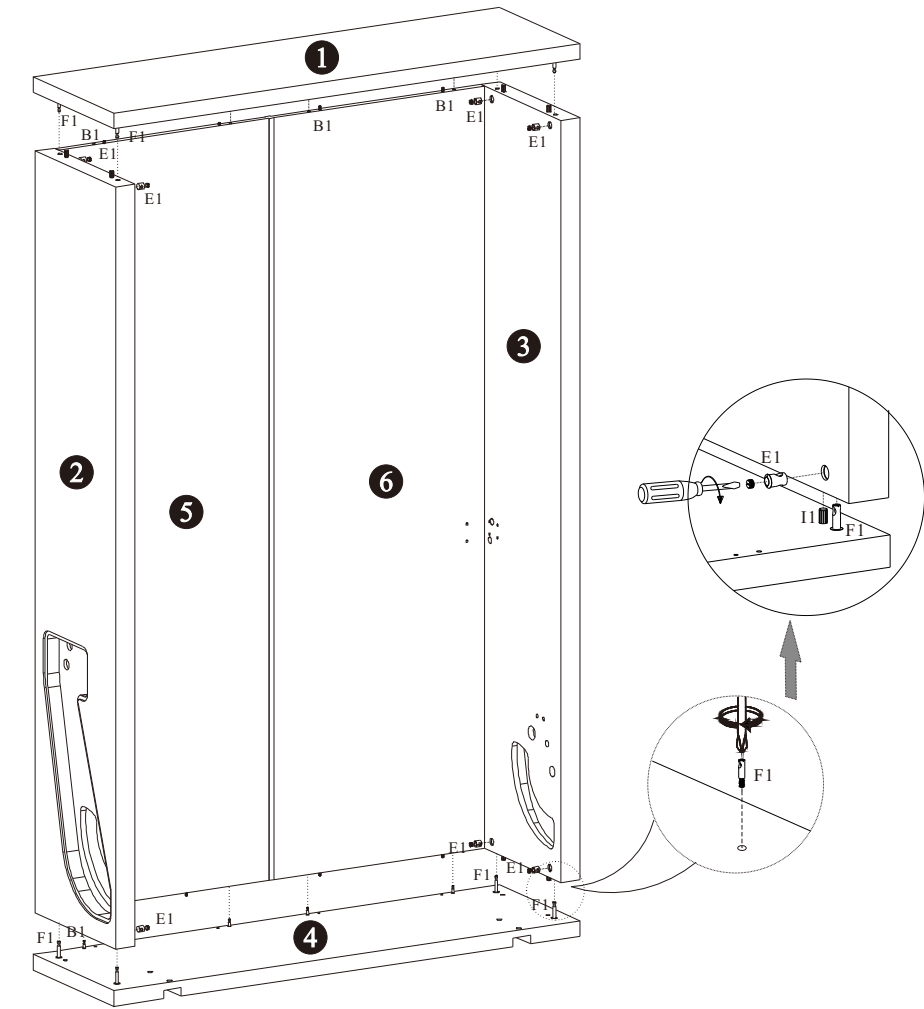

Step 4




A1
(24PCS)
(D15*13)

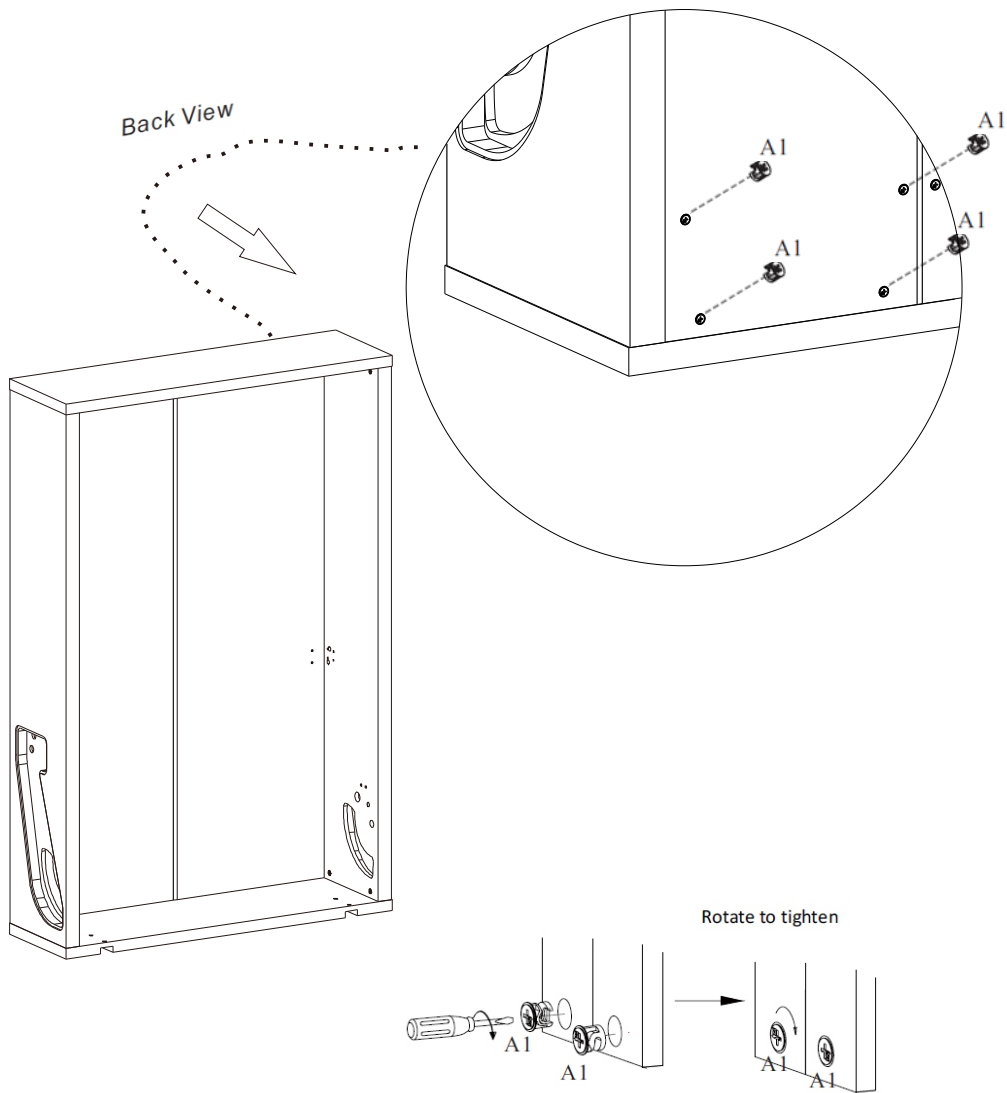

Step 17



B3
(4PCS)
(M6*12)

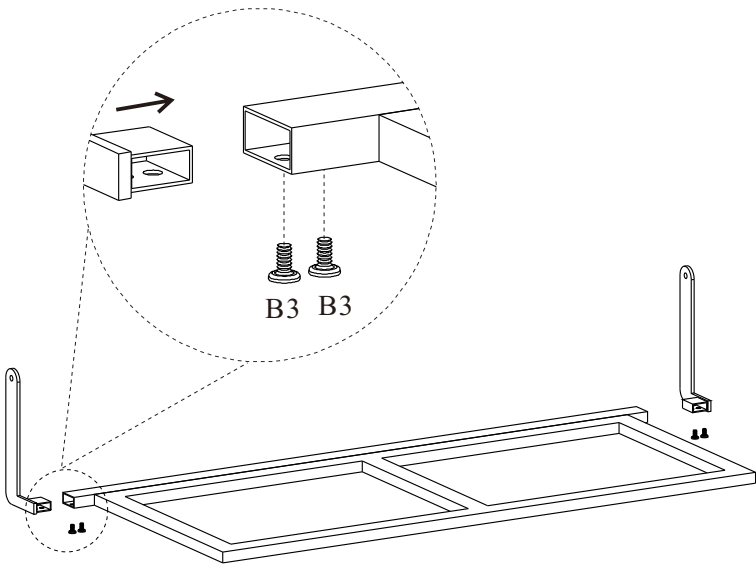


Step 16

- 

F7
(28PCS)
(M6)
- 

F3
(28PCS)
(M6*30)

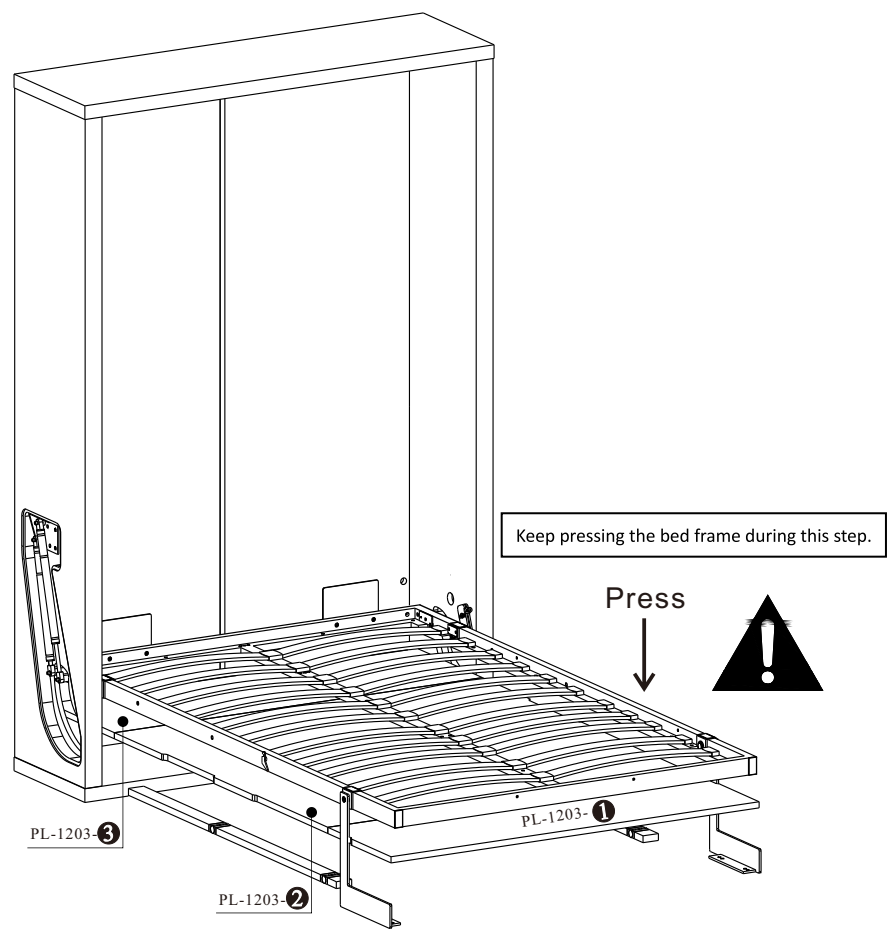


Step 5

- 

A13
(2PCS)
(50*0.6)
- 

B13
(2PCS)
(50*1.0)
- 

C13
(2PCS)
(50*1.5)

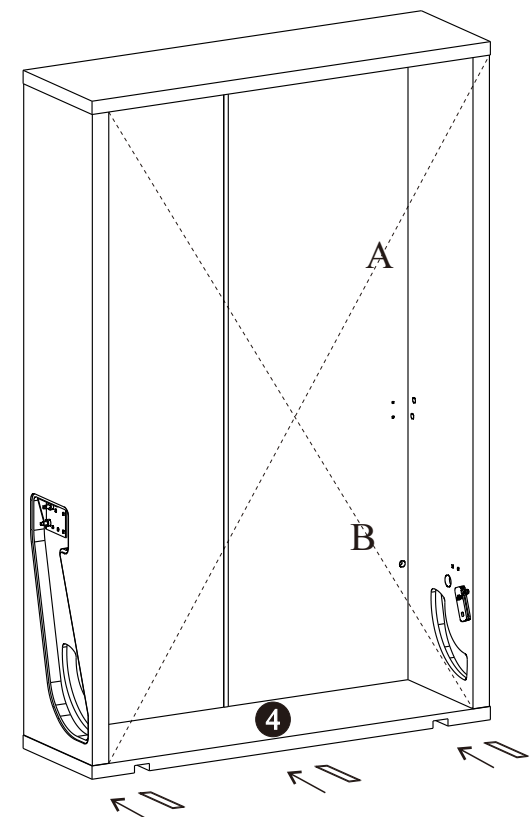

$A = B \quad \checkmark$

$A \neq B \quad \times$

Step 6



A5
(2PCS)
(60*30*30)



I7
(2PCS)
(M8*70)



H7
(2PCS)
(M8*1)



E7
(2PCS)
(D8*1)



O7
(2PCS)
(M8*8)



J7
(2PCS)
(M6*80)



S7
(2PCS)
(200*40*3)



Q3
(2PCS)
(M8*25)



S3
(2PCS)
(M6*30)




H2
(2PCS)
(M6*40)



R3
(4PCS)
(M6*15)



F13
(2PCS)
(96*96*12)

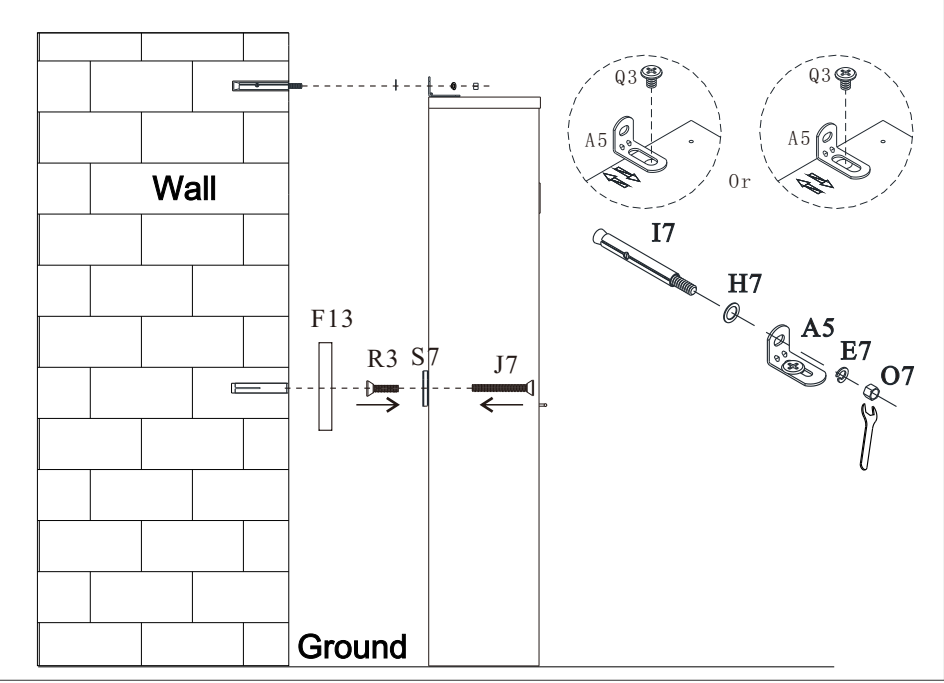


Step 15

Bedframe Fitting




A7
(8PCS)
(M8*8)

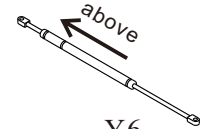


Y6
(4PCS)
(800N/300N D 22*620)

Pre-assembled Fitting




AZ9
(1PC)
(115*100*38.5)



AZ10
(1PC)
(115*100*38.5)



P13
(4PCS)
(D21.8*91.5)

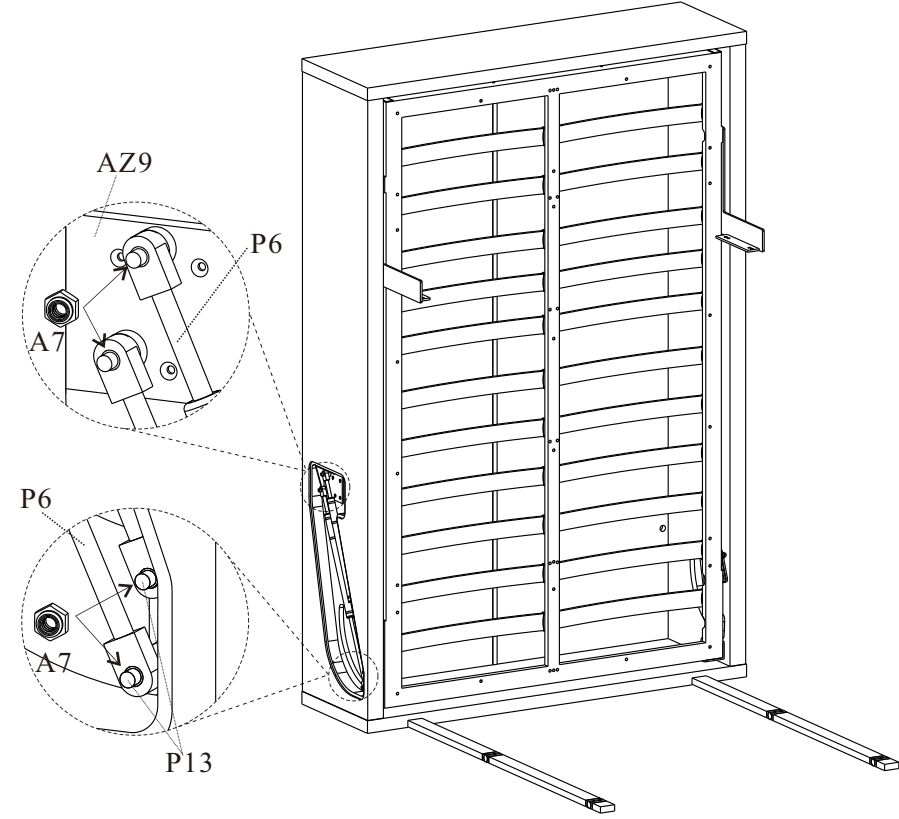


Step 14

- 


P5
(4PCS)
(42*21*5)
- 

I6
(3PCS)
(51*26*5)
- 

N15
(1PCS)
(87*53.7*58)
- 

O15
(4PCS)
(60*34*10)
- 


J3
(4PCS)
(M6*50)

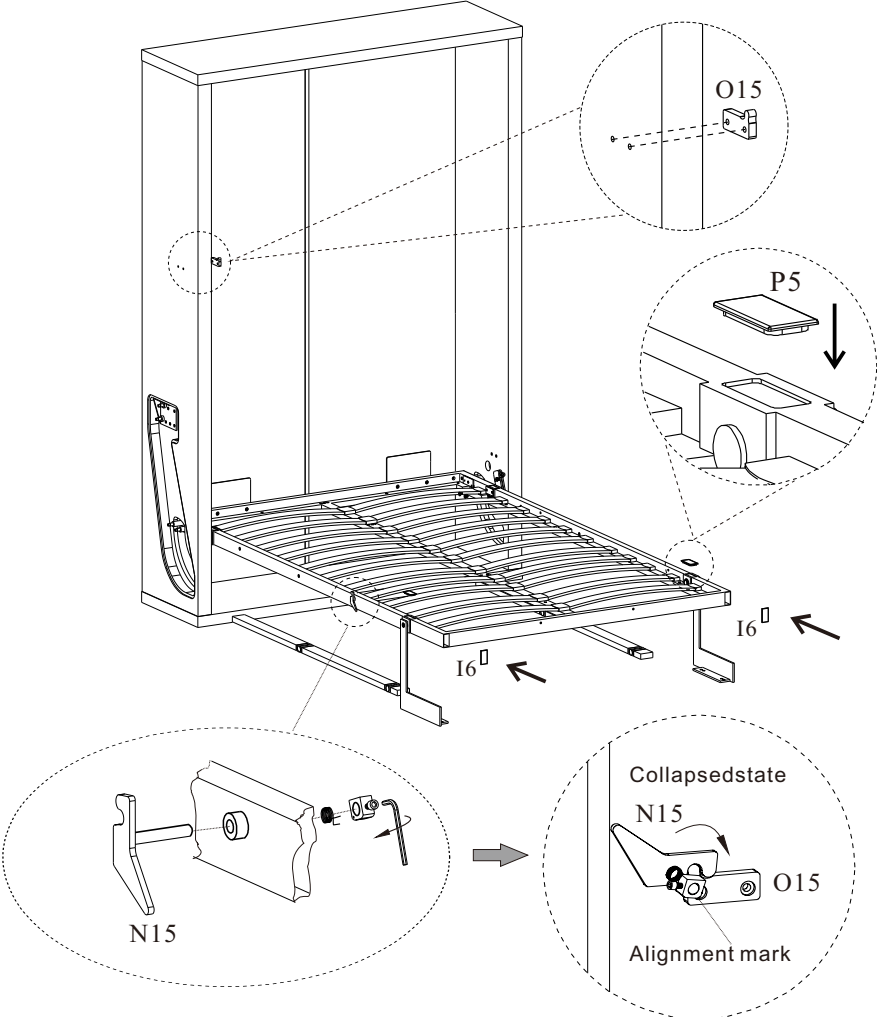


Step 7

- 

F3
(4PCS)
(M6*30)

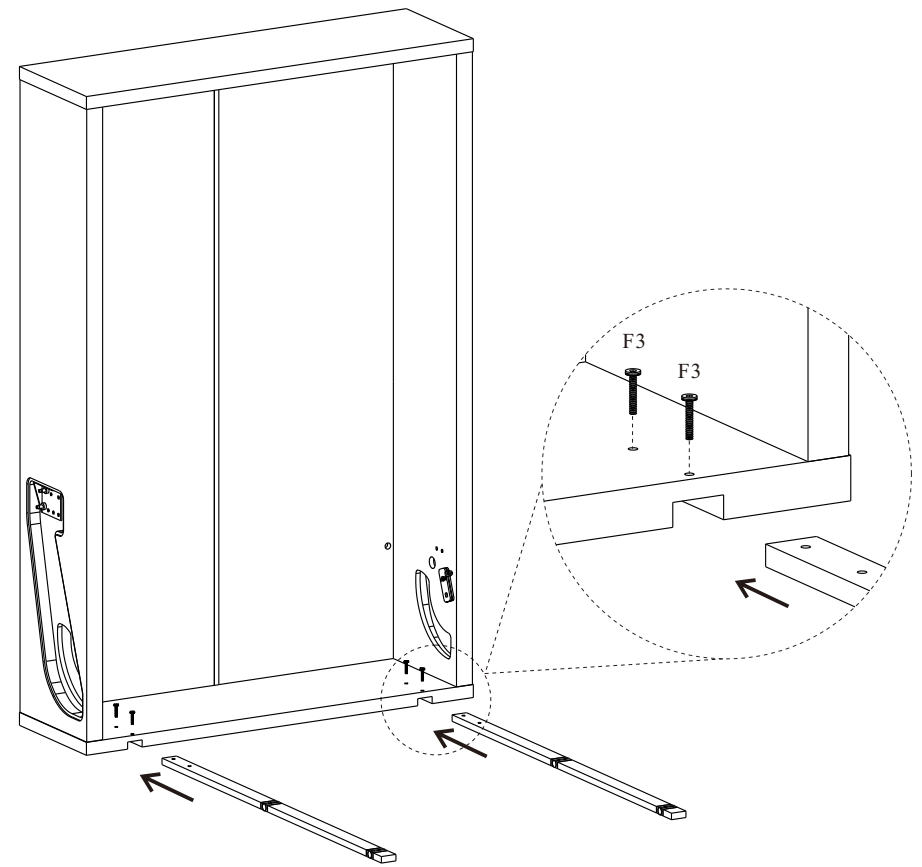


Step 8




L6
(2PCS)
(180*120*3)

B3
(4PCS)
(M6*12)

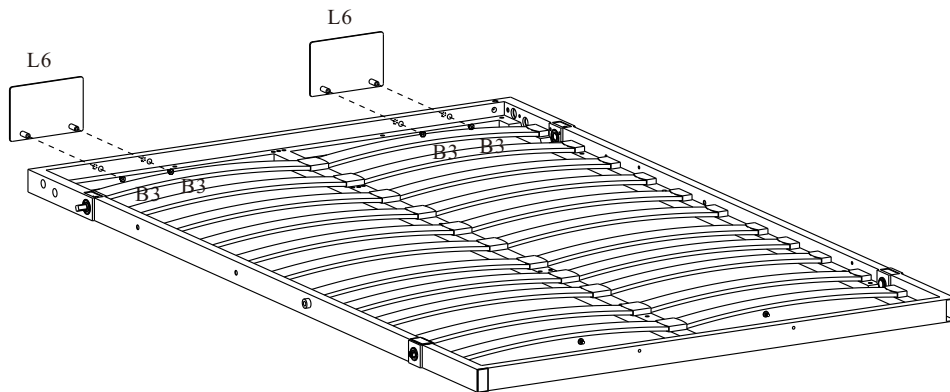

Step 13




AZ6
(2PCS)
(100*40*5)

AZ7
(1PC)
(100*50*30)

AZ8
(1PC)
(100*50*30)

E3
(2PCS)
(M6*25)

AZ12
(2PCS)
(M6*10)

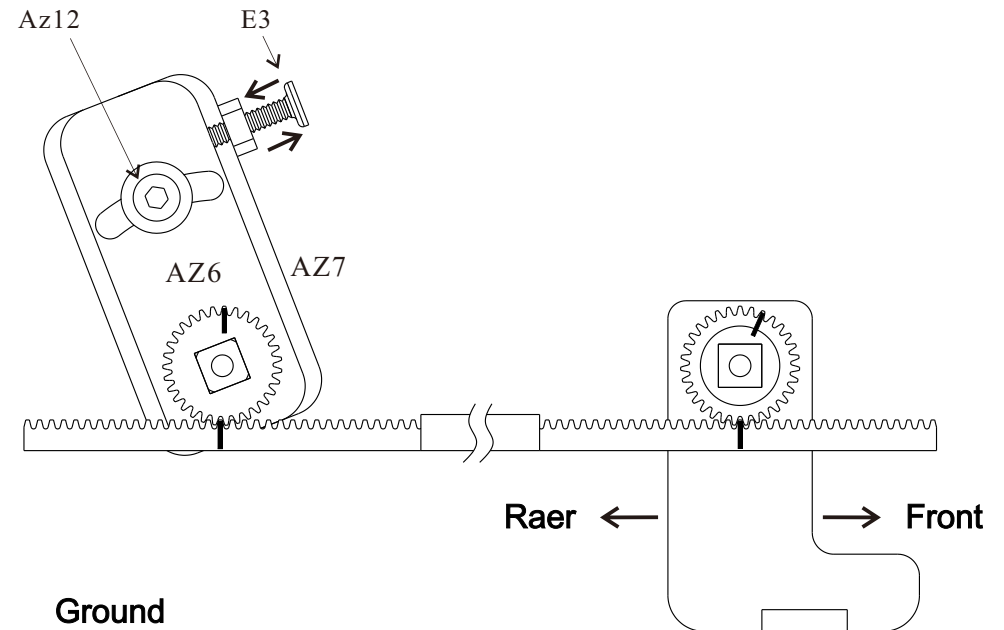

Ground

1. If shelf holders lean backward, loosen hex cap screw (AZ12) by using Allen Key, then drive hex socket head cap screw (AZ11) with Allen Key to press adjustment disc (AZ6) till holders become horizontal. Fasten (AZ12) using Allen Key.
2. If shelf holders lean forward, loosen hex cap screw (AZ12) using Allen Key then extract (AZ11) slightly. Adjust holder till they become horizontal. Fasten (AZ12) then drive (AZ11).

Step 12

- 

C3
(2PCS)
(M6*15)
- 


B3
(4PCS)
(M6*12)
- 

J15
(2PCS)
(50*25*3)
- 

P15
(2PCS)
(70*29*3)
- 


P13
(4PCS)
(D21.8*91.5)
- 

A16
(4PCS)
(M4*10)

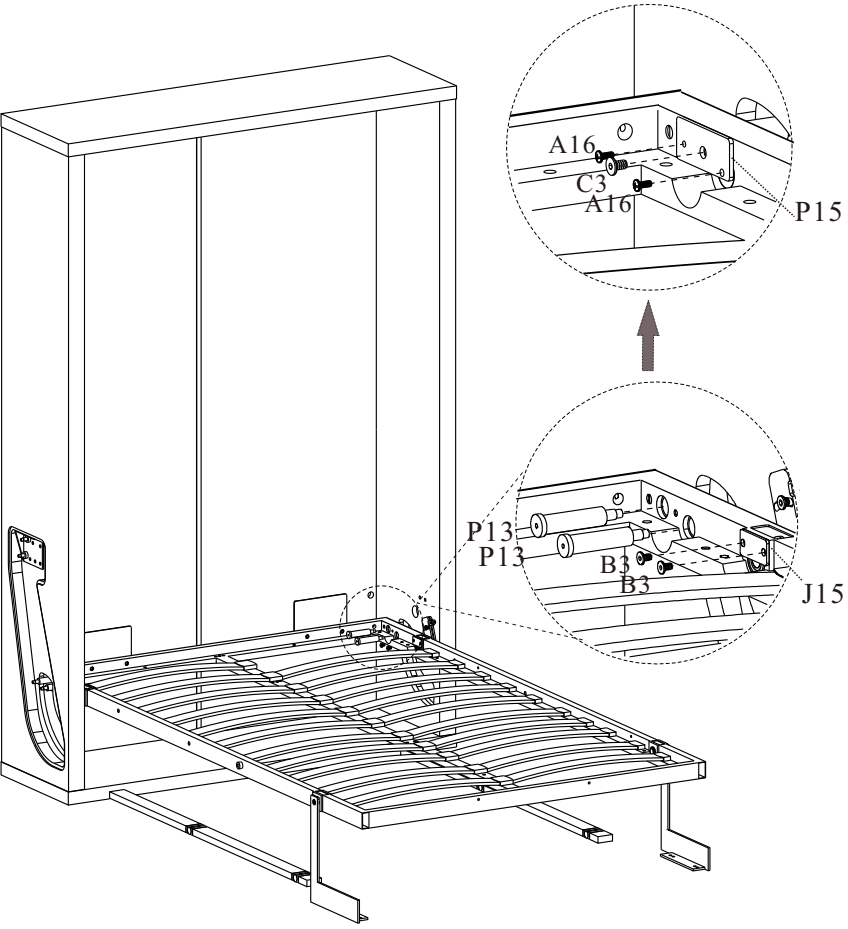

Step 9

Bedframe Fitting

- 

F3
(2PCS)
(M6*30)

Pre-assembled Fitting

- 

AZ1
(2PCS)
(D14.7*58)
- 


AZ2
(2PCS)
(D19*48)
- 

AZ3
(4PCS)
(D33*10)
- 


AZ5
(2PCS)
(D20*7)
- 

Az15
(2PCS)
(M6)

White Line
Find out the white line marked on the gear rack, and then put the gear right on the white line, with the white line on gear AZ3 in the same direction as the gear rack.

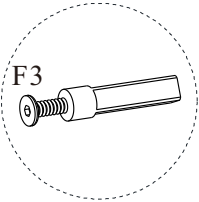


Square Hole
Find out the white line marked on the gear rack, and then put the gear right on the white line, with the square hole of the gear AZ3 horizontal

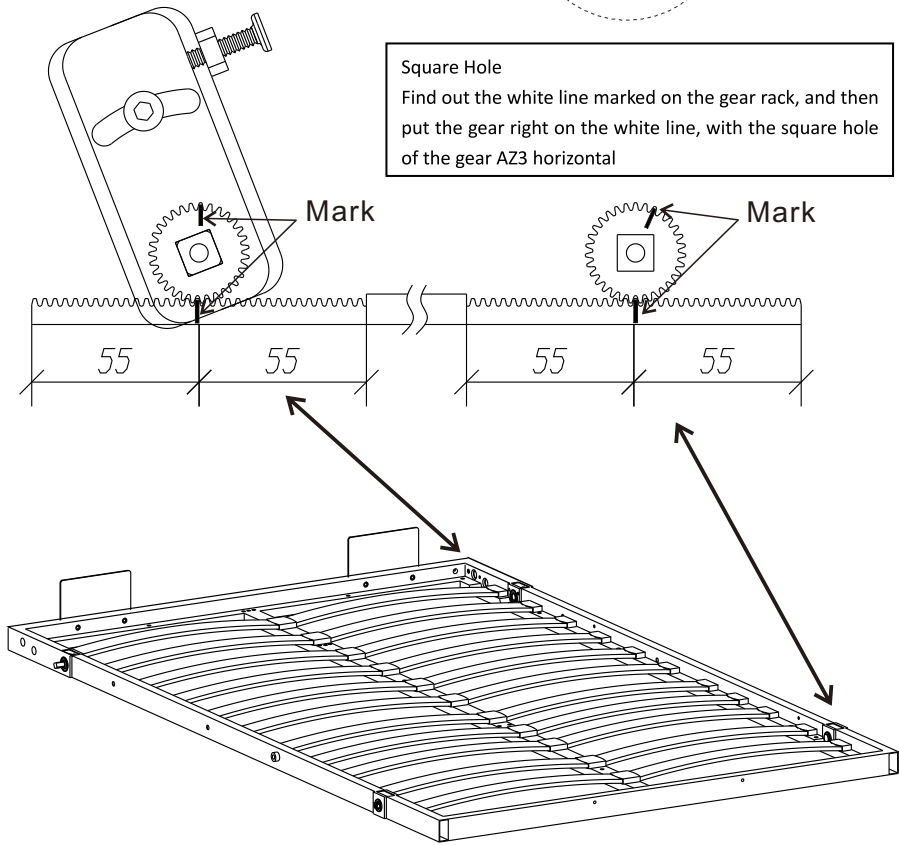

Step 10

Bedframe Fitting



F3
(2PCS)
(M6*30)

T16
(2PCS)
(D20*3.5)

Pre-assembled Fitting




AZ1
(2PCS)
(D14.7*58)

AZ2
(2PCS)
(D19*48)

AZ3
(2PCS)
(D33*10)

AZ5
(2PCS)
(D20*7)

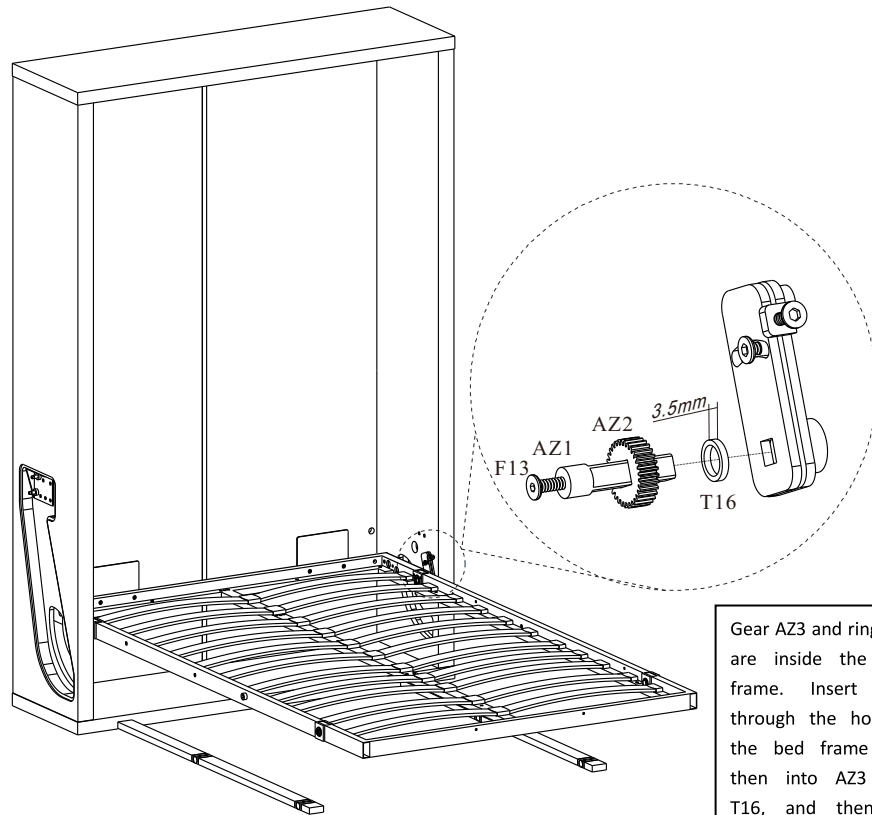

Gear AZ3 and ring T16 are inside the bed frame. Insert AZ1 through the hole in the bed frame and then into AZ3 and T16, and then let come out on the other side.

Step 11




AZ2
(2PCS)
(D19*48)

AZ3
(2PCS)
(D33*10)

AZ13
(2PCS)
(M8*15)

AZ5
(2PCS)
(D20*7)

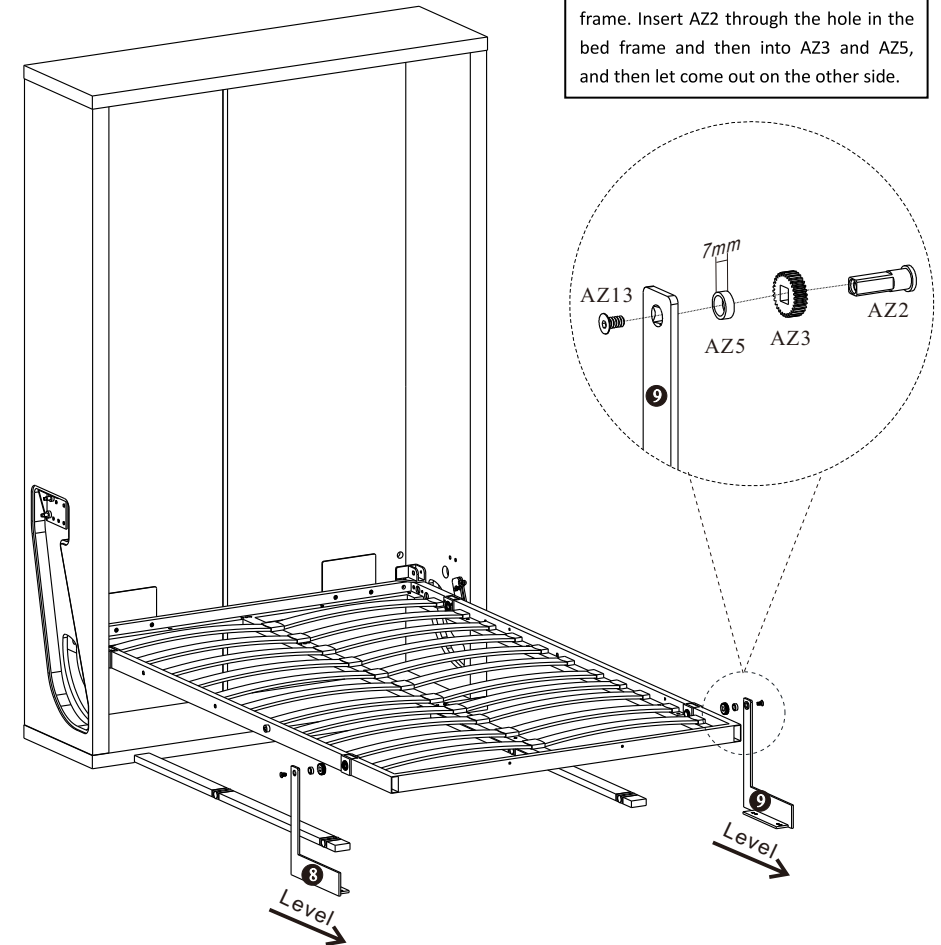

Gear AZ3 and ring AZ25 are inside the bed frame. Insert AZ2 through the hole in the bed frame and then into AZ3 and AZ5, and then let come out on the other side.